

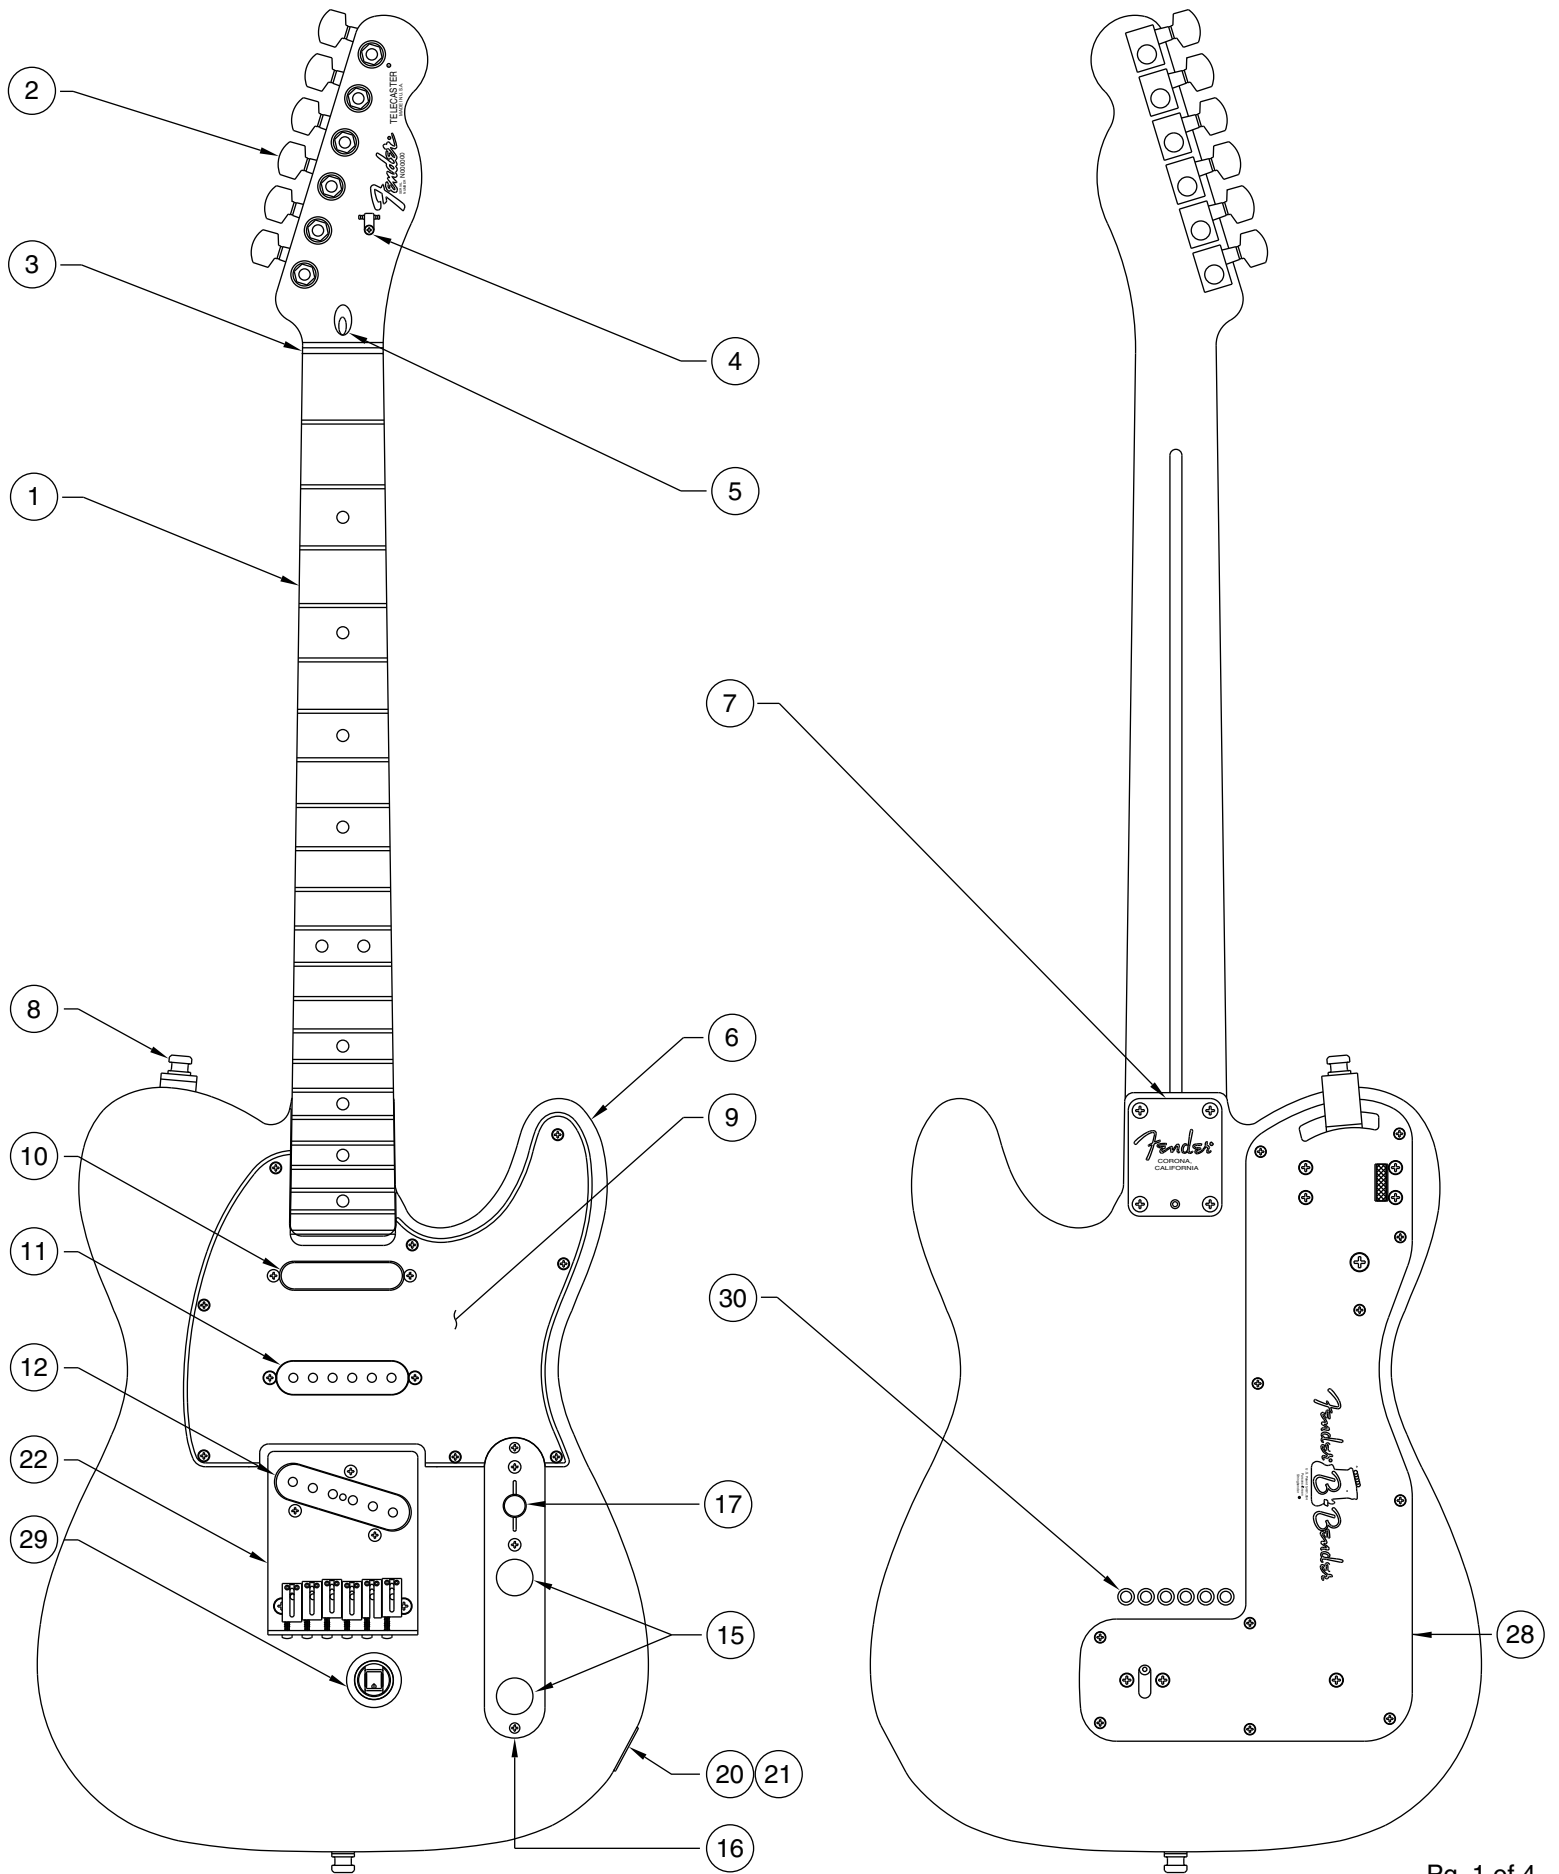


# NASHVILLE B-BENDER TELECASTER 0108342

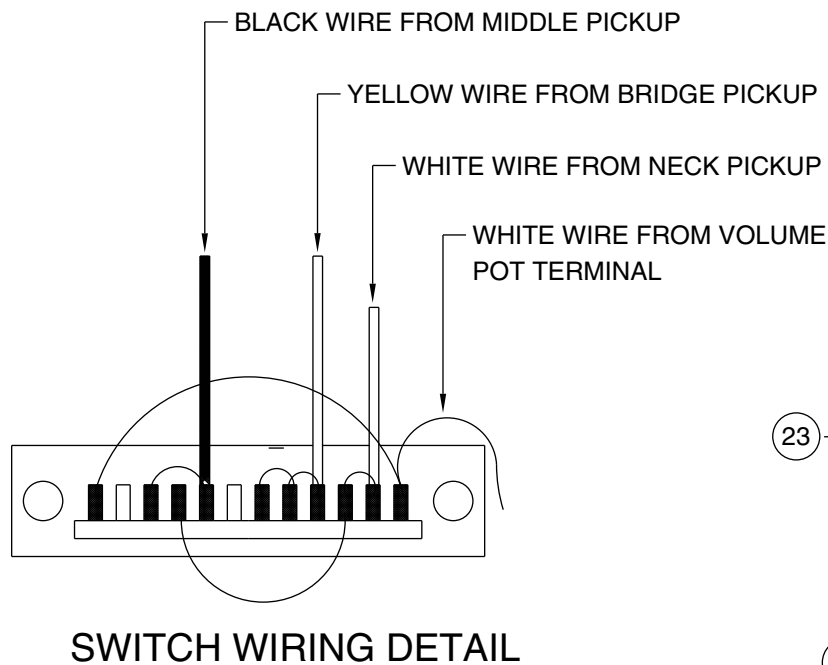


# NASHVILLE B-BENDER TELECASTER 0108342

## CONTROL ASSEMBLY

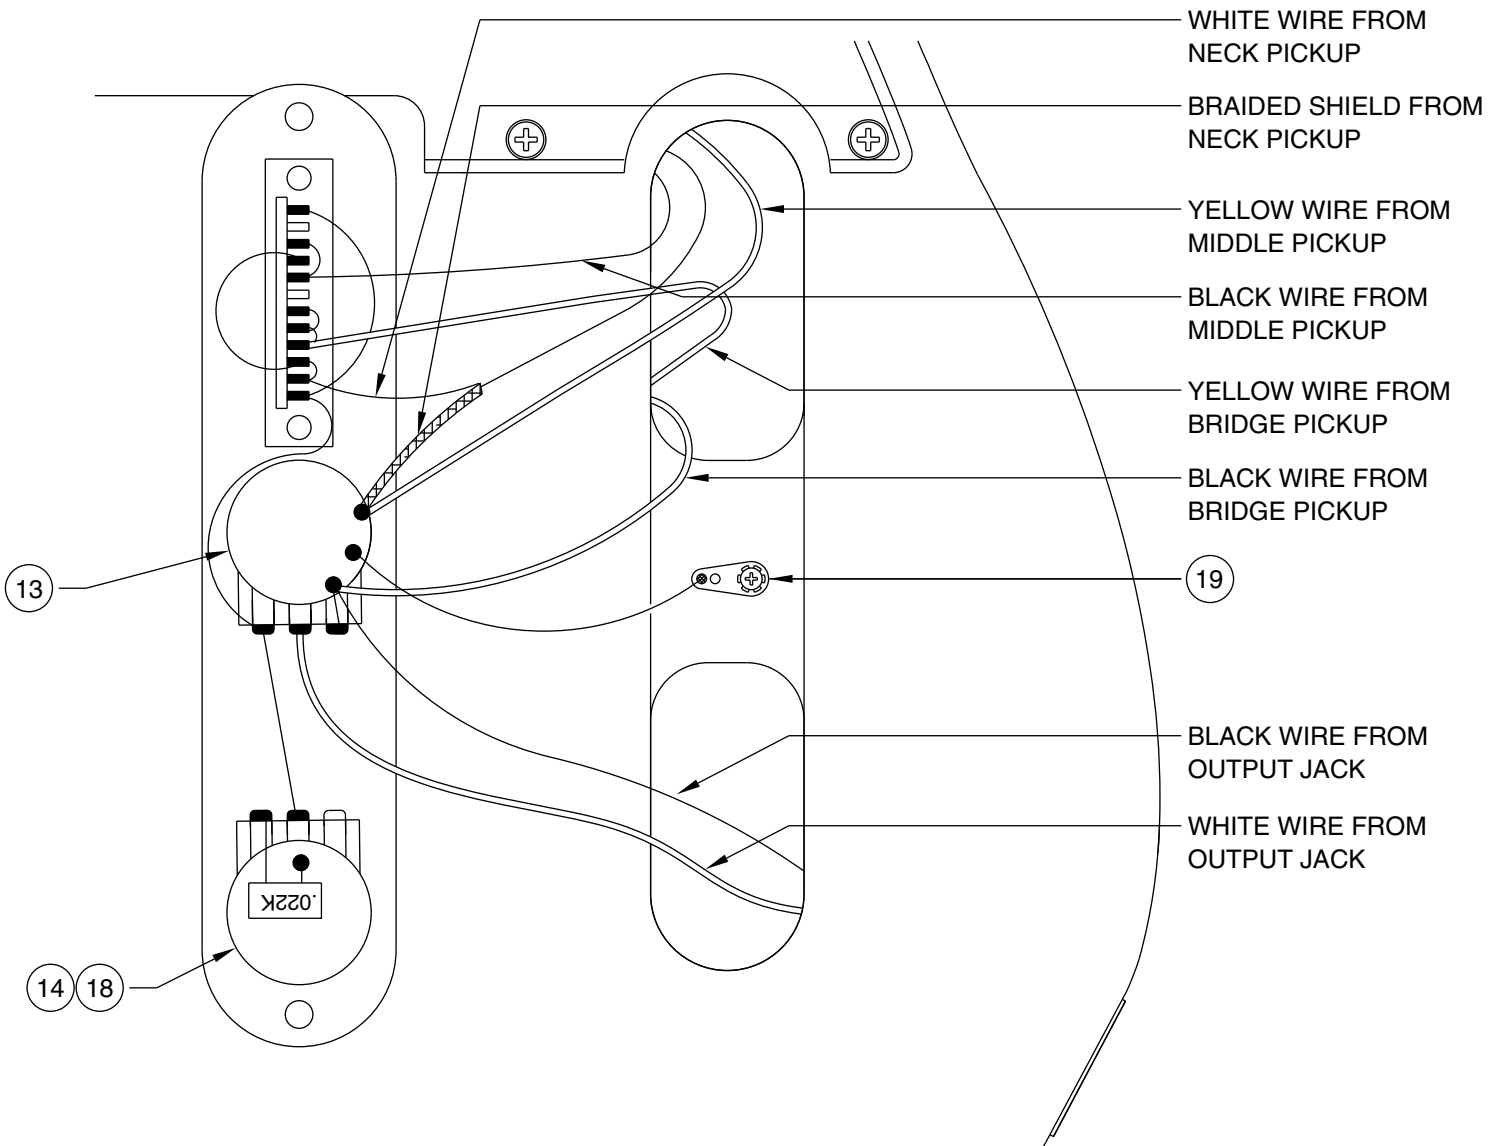

## BRIDGE ASSEMBLY

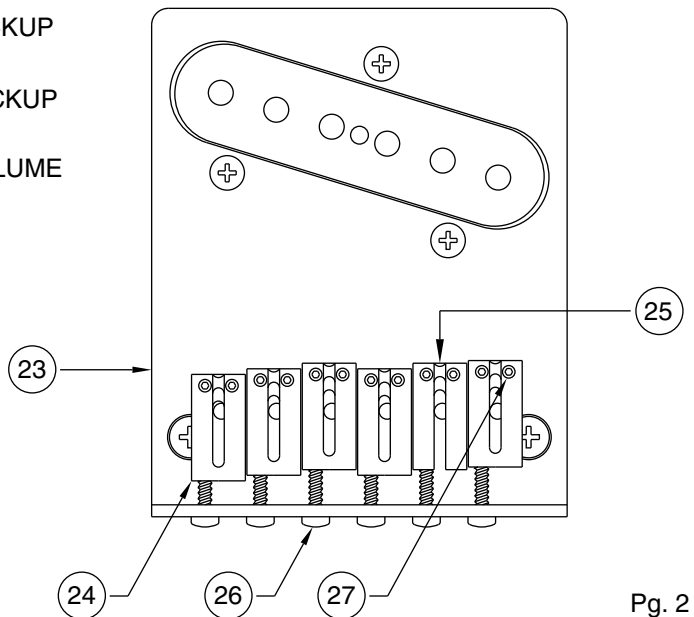

## NASHVILLE B-BENDER TELECASTER 0108342


REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0028177000	Neck, American Standard Telecaster, M/N		0018531000	Adjusting Wrench, Saddle Height
2	0021374000	Tuning Key, (1) Set, W/Bushing	28	0050640000	B-Bender Assembly
3	0083675000	Bone Nut		0021407000	Mounting Screw
4	0021537000	String Retainer	29	0050619000	Ferrule, B-Bender
	0021405000	Mounting Screw	30	0021429000	Ferrule, String Retainer
5	0020810000	Truss Rod Adjustment Nut			
	0023811000	Truss Rod Adjusting Wrench			
6	0054072xxx	Body, Hot Rod B-Bender Tele., Sunburst			
7	0054038000	Neck Mounting Plate			
	0021424000	Mounting Screw			
	0031571000	Tilt Adjustment Screw			
	0023811000	Tilt Adjusting Wrench			
8	0021453000	Strap Button			
	0021422000	Mounting Screw			
	0019056000	Felt Washer, Black			
	0020491000	Felt Washer, White			
9	0048638000	Pickguard, Telecaster Plus, Pearl			
	0021407000	Mounting Screw			
10	0050890000	Pickup, Neck, Am. Std. Tele, Hot			
	0021409000	Mounting Screw			
	0039409000	Tubing, Latex Cut			
11	0053102000	Pickup, Middle, Texas Special			
	0048631000	Mounting Screw			
	0036481000	Tubing, Latex Cut			
12	0050888000	Pickup, Bridge, Am. Std. Tele., Hot			
	0048631000	Mounting Screw			
	0036878000	Tubing, Latex Cut			
13	0019064000	Control, 250K, Audio			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
14	0050886000	Control, 250K, Solid			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
15	0013359000	Knob, Knurled (2)			
	0028897001	Screw Set			
16	0033134060	Control Plate			
	0021407000	Mounting Screw			
17	0039003000	Switch, Lever 5-Position			
	0021413000	Mounting Screw			
	0018359000	Knob, Black			
18	0024832000	Capacitor, .022uf			
19	0012869000	Solder Lug			
	0015116000	Mounting Screw			
20	0021956000	Output Jack			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
21	0021452000	Ferrule, Jack			
22	0050642000	Bridge Assembly, B-Bender Telecaster			
	0021373000	Mounting Screw			
23	0050632000	Bridge Plate			
24	0026099000	Bridge Section, (5)			
25	0050633000	Bridge Section, (1)			
26	0017031000	Intonation Screw, 1-4			
	0029094000	Intonation Spring, 1-4			
	0031913000	Intonation Screw, 5&6			
	0029095000	Intonation Spring, 5&6			
27	0026780000	Height Adjustment Screw, 1&6			
	0018027000	Height Adjustment Screw, 2-5			

Body Part Number	
0054072500	3 Color Sunburst
0054072505	Olympic White
0054072506	Black
0054072509	Candy Apple Red

# NASHVILLE B-BENDER TELECASTER 0108342

## SWITCH & CONTROL FUNCTION

5 WAY SWITCH POSITION					
					← 5 WAY SWITCH POSITION
					← NECK PICKUP
					← MIDDLE PICKUP
					← BRIDGE PICKUP
	← PICKUP IS ON				← PICKUP IS OFF

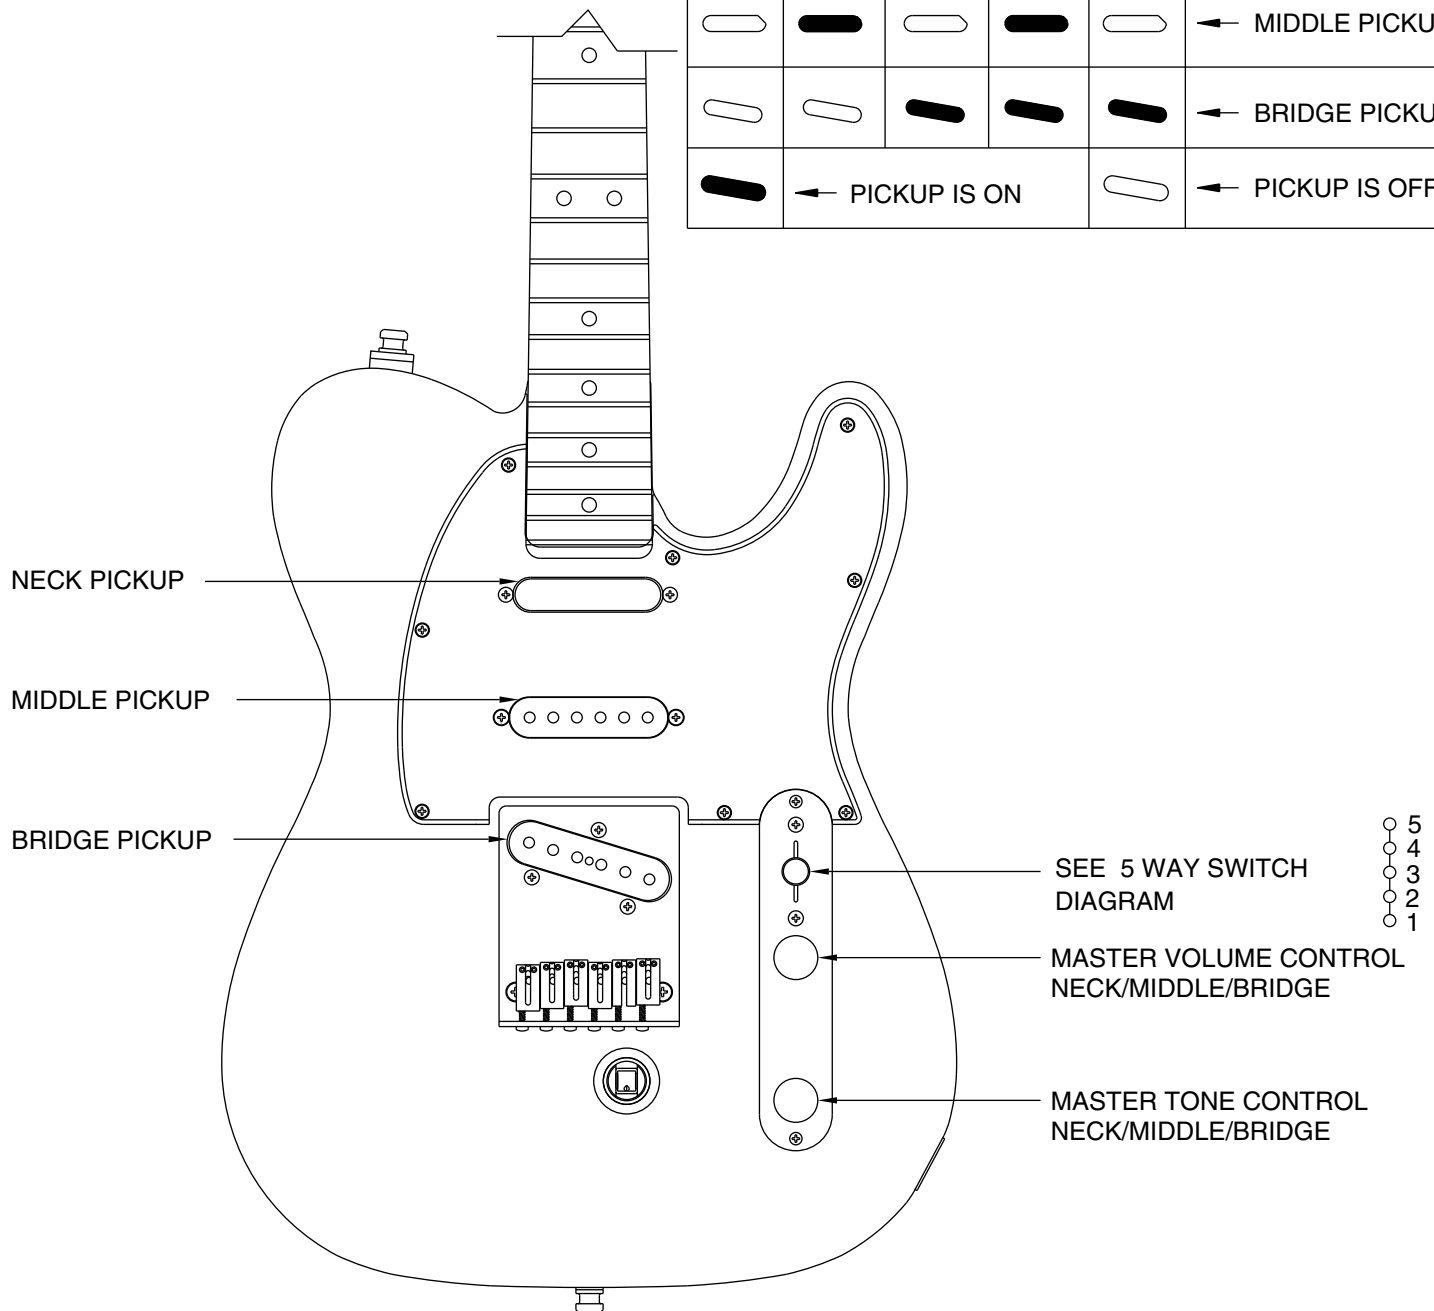

SEE 5 WAY SWITCH  
DIAGRAM

MASTER VOLUME CONTROL  
NECK/MIDDLE/BRIDGE

MASTER TONE CONTROL  
NECK/MIDDLE/BRIDGE

○ 5  
○ 4  
○ 3  
○ 2  
○ 1