




CLASSIC PLAYER BAJA TELECASTER[®], 014-1502

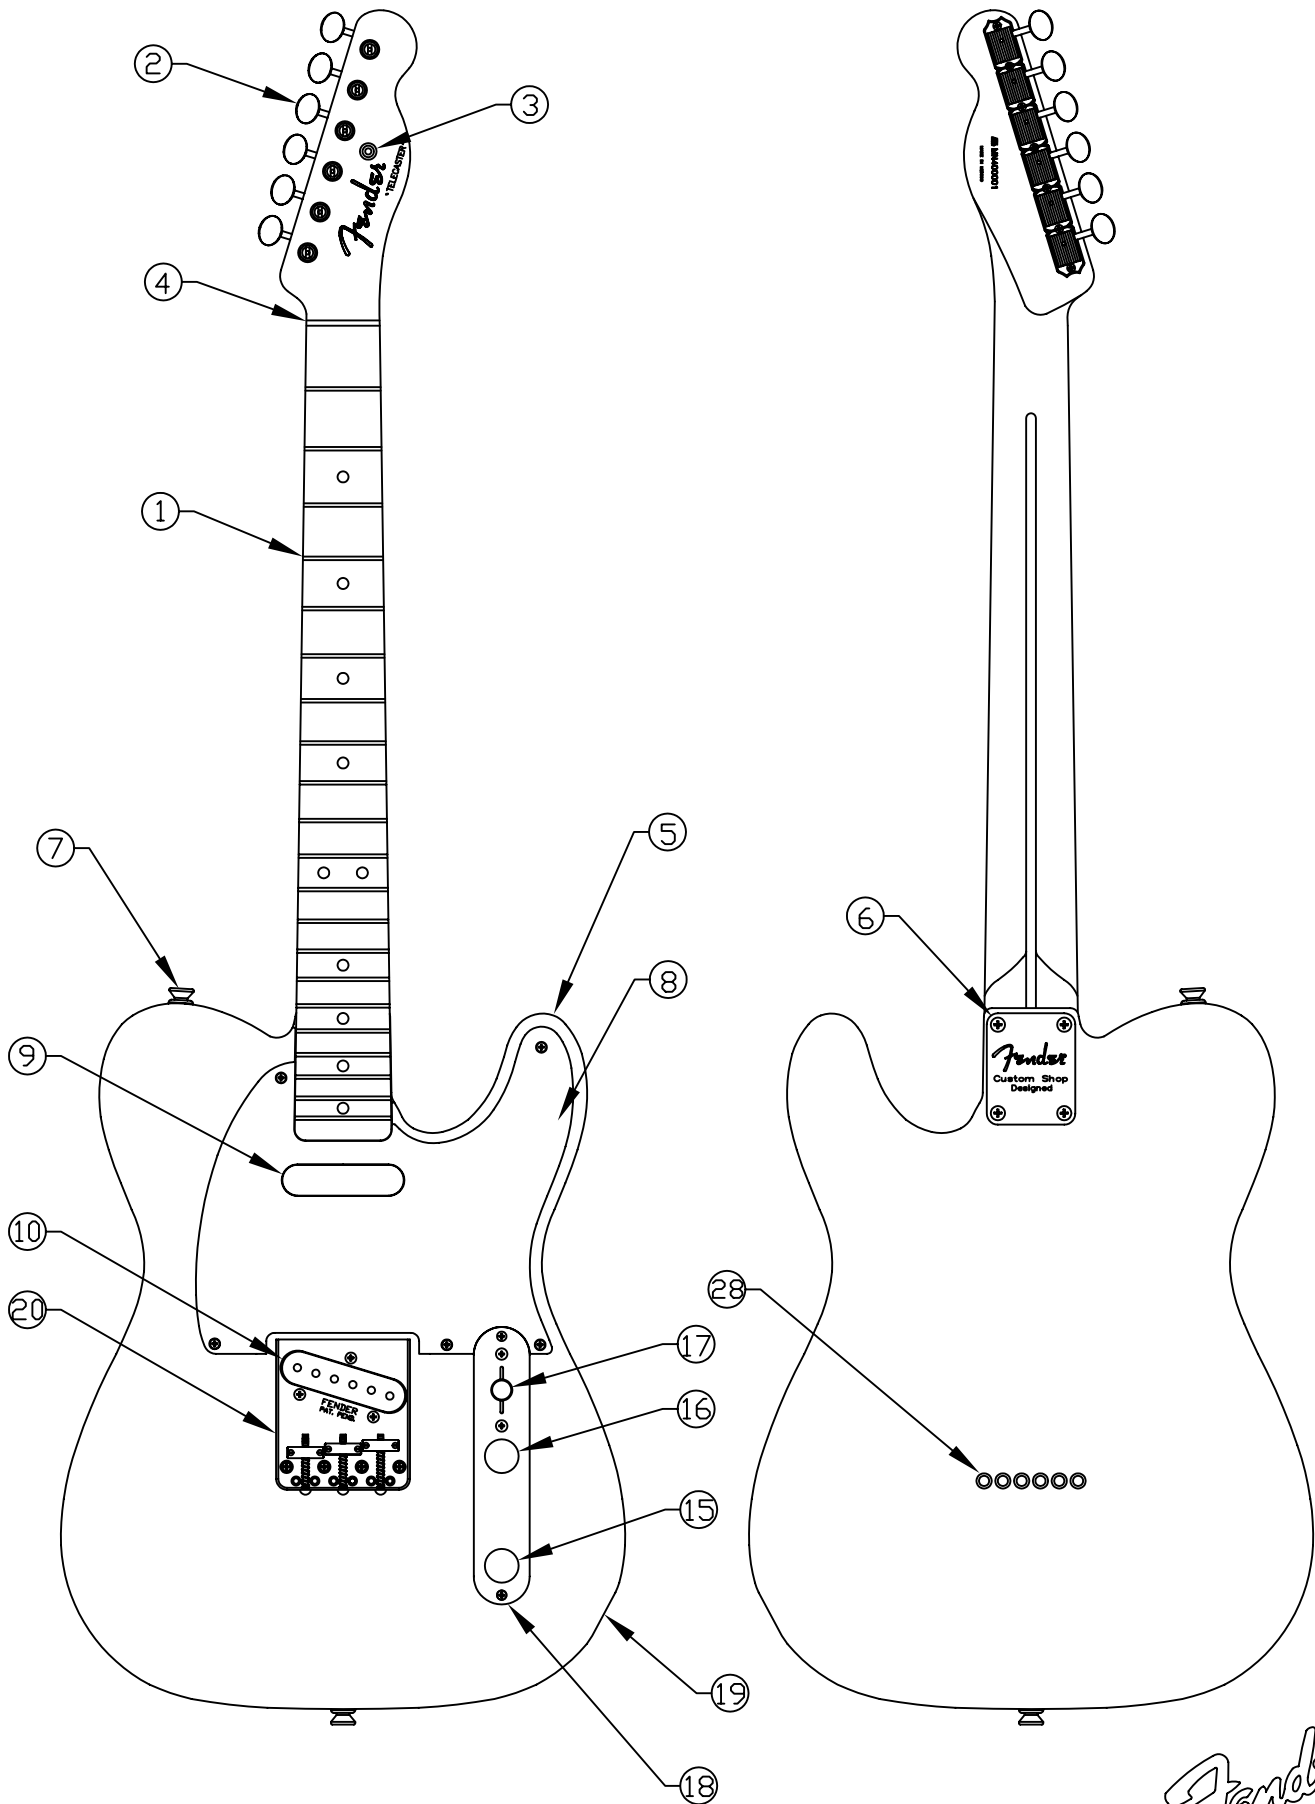

Fender[®]

CLASSIC PLAYER BAJA TELECASTER[®], 014-1502

WIRING DIAGRAM

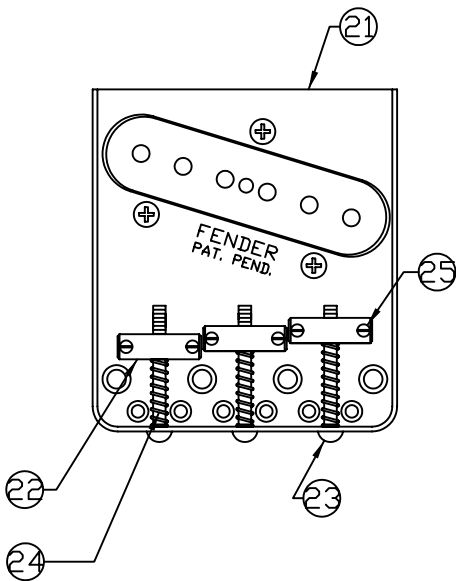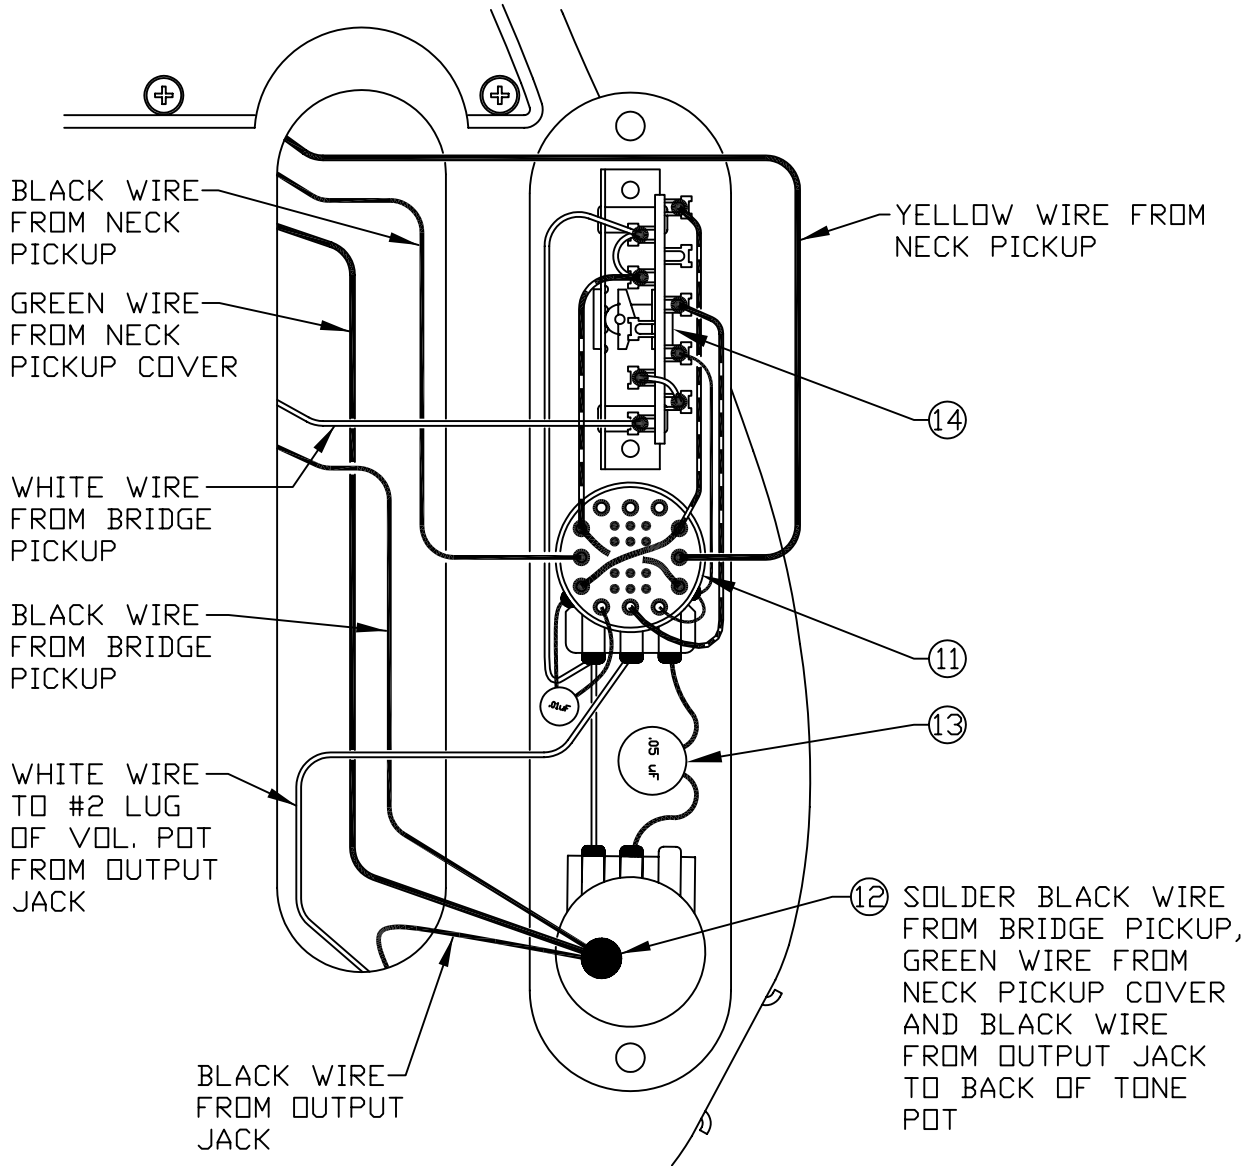

CLASSIC PLAYER BAJA TELECASTER[®], 014-1502


| REF.# | P/N | DESCRIPTION |
|-------|------------|---|
| 1 | 0072244000 | Neck, Classic Player Tele, MN |
| 2 | 0047912000 | Tuning Key, Key Set Vintage, Ping |
| | 0053020000 | Bushing Key Vintage, Ping |
| | 0011357000 | Mounting Screw |
| 3 | 0018365000 | String Guide Vintage Tele |
| | 0015578000 | Mounting Screw |
| 4 | 0083675000 | Bone Nut |
| 5 | See Chart | Body, Tele Vintage |
| 6 | 0072246000 | Neck Mounting Plate, Custom Shop Design |
| | 0015636000 | Mounting Screw |
| 7 | 0012344000 | Strap Button |
| | 0015610000 | Mounting Screw |
| 8 | See Chart | Pickguard, Tele Vintage |
| | 0015578000 | Mounting Screw |
| 9 | 0072267000 | Pickup, Twisted Tele. Neck |
| | 0016295000 | Mounting Screw |
| | 0039410000 | Latex Tubing |
| 10 | 0072268000 | Pickup, Vintage Tele. Bridge |
| | 0048631000 | Mounting Screw |
| | 0063398000 | Latex Tubing |
| 11 | 0061260000 | S-1 Switch/Pot Control, Volume |
| | 0054504000 | Capacitor, .01 μ F 10% |
| | 0016352000 | Mounting Nut |
| | 0016436000 | Lock Washer |
| 12 | 0019064000 | Control 250K, Tune |
| | 0016352000 | Mounting Nut |
| | 0016436000 | Lock Washer |
| 13 | 0015552000 | Capacitor, .05 μ F 100V 20% |
| 14 | 0058137000 | Switch, 4-Way Toggle |
| | 0021417000 | Mounting Screw |
| 15 | 0013359000 | Knob, Control Tele, Tune |
| | 0028897001 | Mounting Set Screw |
| 16 | 0059272000 | Switch Knob, Tele, Volume |
| | 0059270000 | Switch Cap, Tele |
| | 0059278000 | Coupling Sleeve Sosh Nylon |
| | 0028897001 | Mounting Set Screw |
| 17 | 0018359000 | Knob, Switch Vintage Tele |
| 18 | 0033134060 | Control Plate, Telecaster |
| | 0015578000 | Mounting Screw |
| 19 | 0037428000 | Output Jack |
| | 0016436000 | Lock Washer |
| | 0016352000 | Mounting Hex Nut |
| | 0021452000 | Jack Ferrule |
| | 0010355060 | Retainer |
| 20 | 0072249000 | Bridge Assembly, Classics Player Tele |
| | 0016188000 | Mounting Screw |
| | 0018531000 | Bridge Adjustment wrench |
| 21 | 0054162000 | Bridge Plate |
| 22 | 0018360000 | Bridge Section, (3) |
| 23 | 0015834000 | Intonation Screw, (3) |
| 24 | 0018689000 | Intonation Spring, (3) |
| 25 | 0016105000 | Height Adjustment Screw, (6) |
| 28 | 0012112000 | String Retainer |

| BODY | | PICKGUARD | |
|------------|----------------|------------|-------|
| P/N | COLOR | P/N | COLOR |
| 0073026507 | Vintage Blonde | 0072980002 | Black |
| 0073026589 | Desert Sand | 0072247000 | Parch |



CLASSIC PLAYER BAJA TELECASTER[®], 014-1502

SWITCH & CONTROL FUNCTION

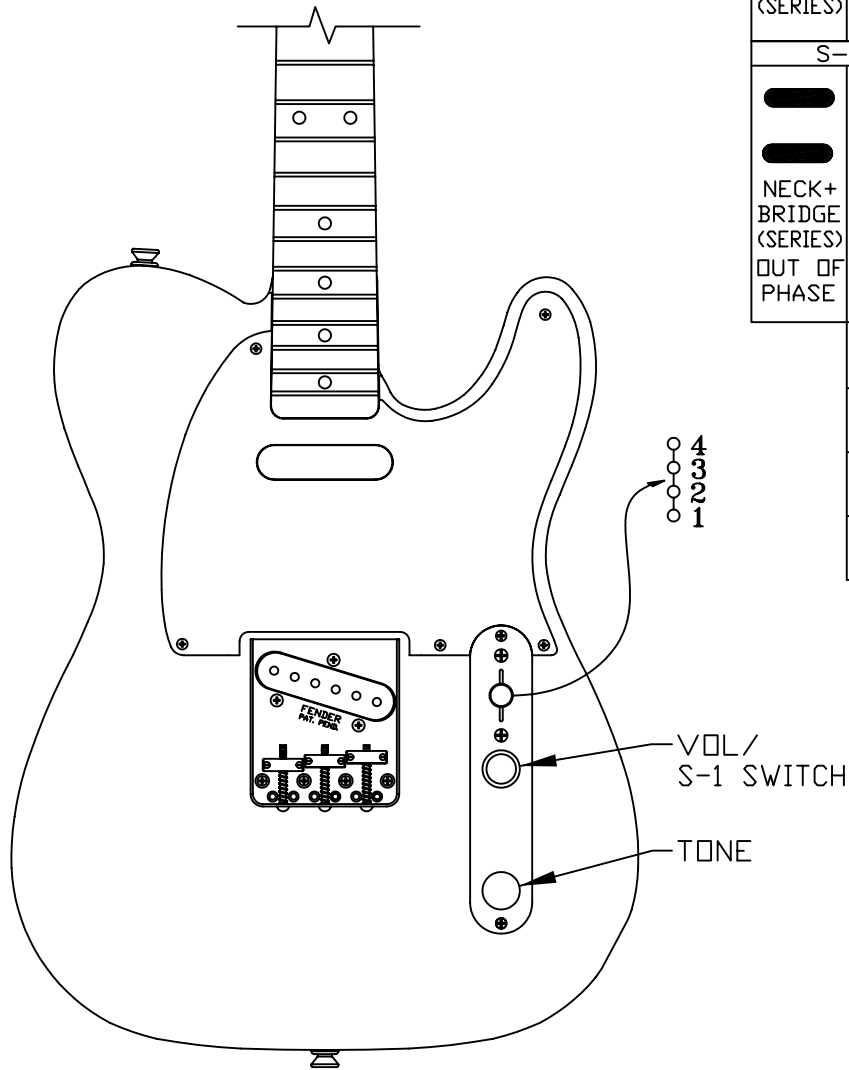

| 4 WAY SWITCH POSITION | | | | MASTER VOLUME AND MASTER TONE WORKS IN ALL POSITIONS |
|--|-----------|--------------------------------------|-------------|--|
| 4 | 3 | 2 | 1 | |
| S-1 SWITCH OFF (UP) | | | | |
| | | | | ← NECK PICKUP (A) |
| NECK+ BRIDGE (SERIES) | NECK ONLY | NECK+ BRIDGE (PARALELL) | BRIDGE ONLY | ← BRIDGE PICKUP (B) |
| S-1 SWITCH ON (DOWN) | | | | |
| | | | | ← NECK PICKUP (A) |
| NECK+ BRIDGE (SERIES) OUT OF PHASE | NECK ONLY | NECK+ BRIDGE (PARALELL) OUT OF PHASE | BRIDGE ONLY | ← BRIDGE PICKUP (B) |
| PICKUP IS ON PICKUP IS OFF | | | | |
| A PICKUP (NECK) B PICKUP (BRIDGE) | | | | INDICATES POSITION OF 4 WAY SWITCH |