


# LITE ASH STRATOCASTER 0265002/521

## SWITCH & CONTROL FUNCTION

| 5 WAY SWITCH POSITION |                |      |      |   |                        |
|-----------------------|----------------|------|------|---|------------------------|
|                       |                |      |      |   | ← 5WAY SWITCH POSITION |
| V&T1                  | V&T1,T2        | V&T2 | V&T2 | V | ← TONE CONTROL         |
|                       |                |      |      |   | ← NECK PICKUP          |
|                       |                |      |      |   | ← MIDDLE PICKUP        |
|                       |                |      |      |   | ← BRIDGE PICKUP        |
|                       | ← PICKUP IS ON |      |      |   | ← PICKUP IS OFF        |

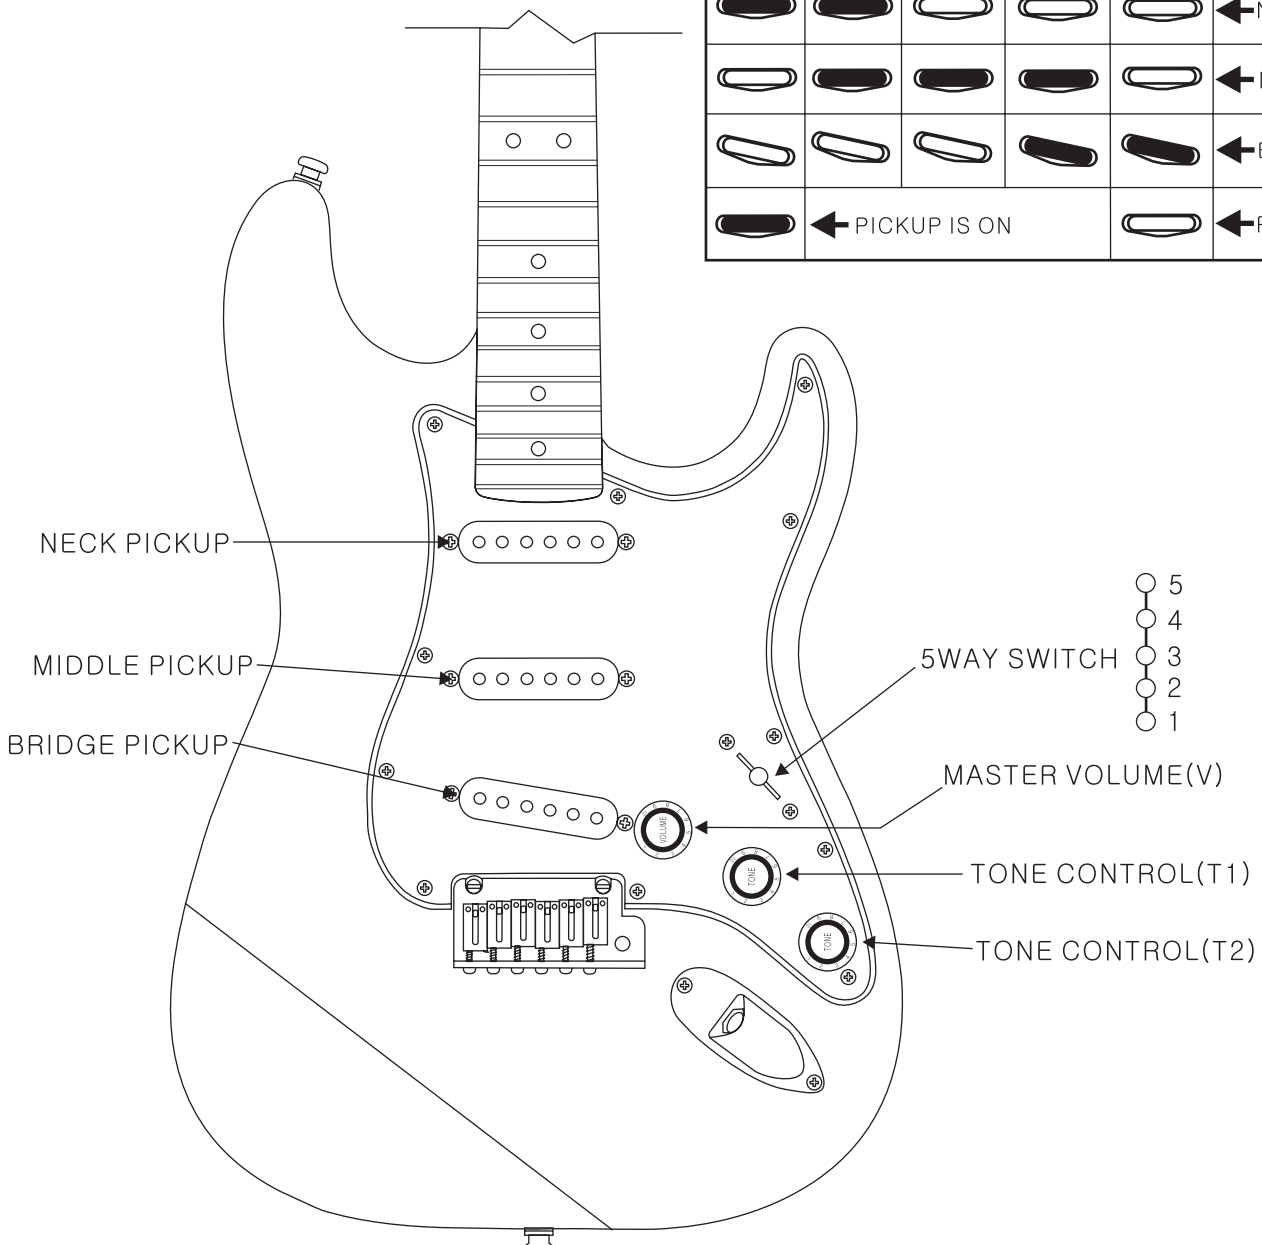

LITE ASH STRATOCASTER 0265002/521

PICKGUARD ASSEMBLY

