

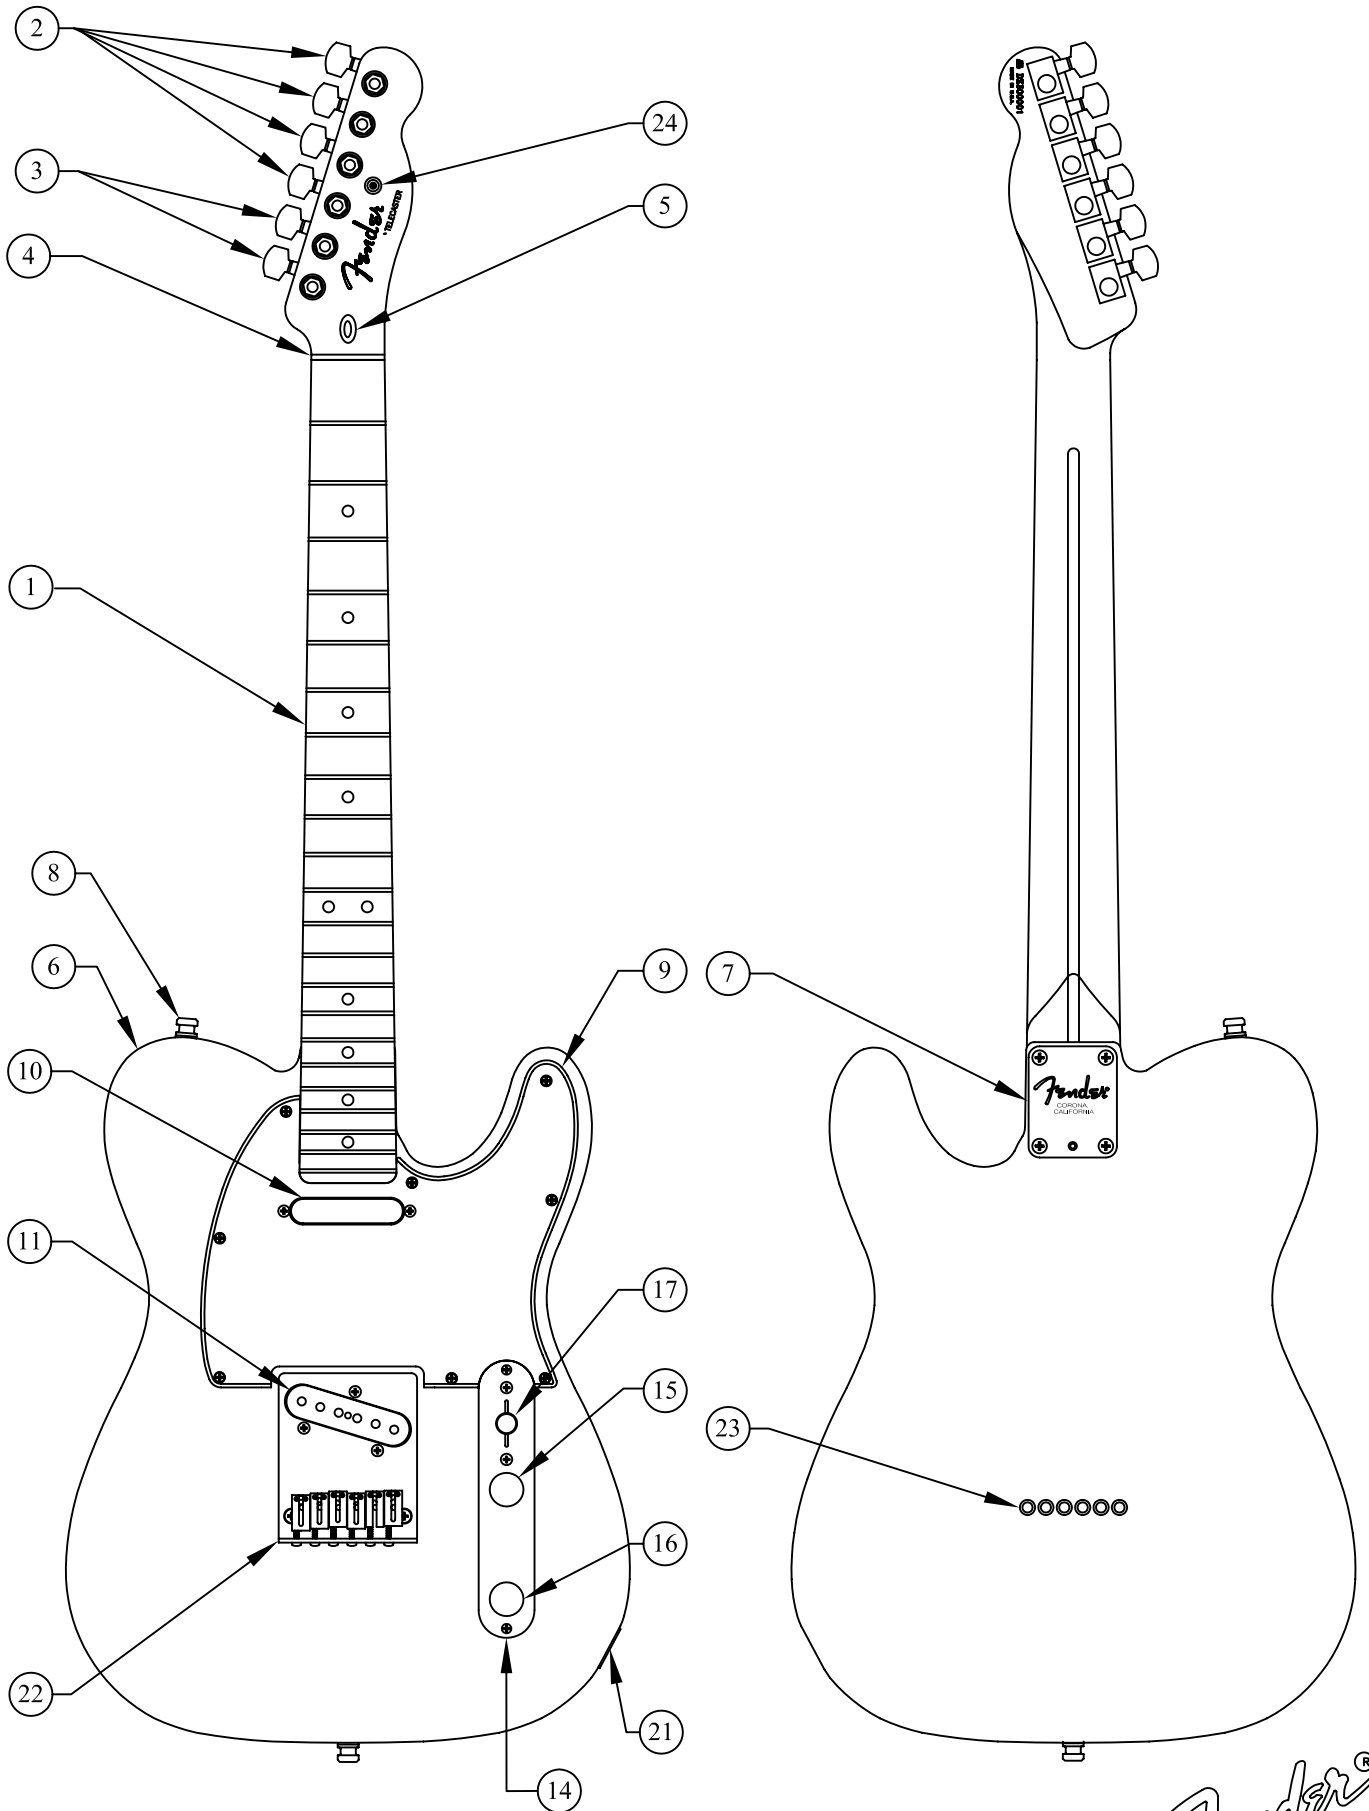


AMERICAN DELUXE TELECASTER[®], MN, ASH, 0101702

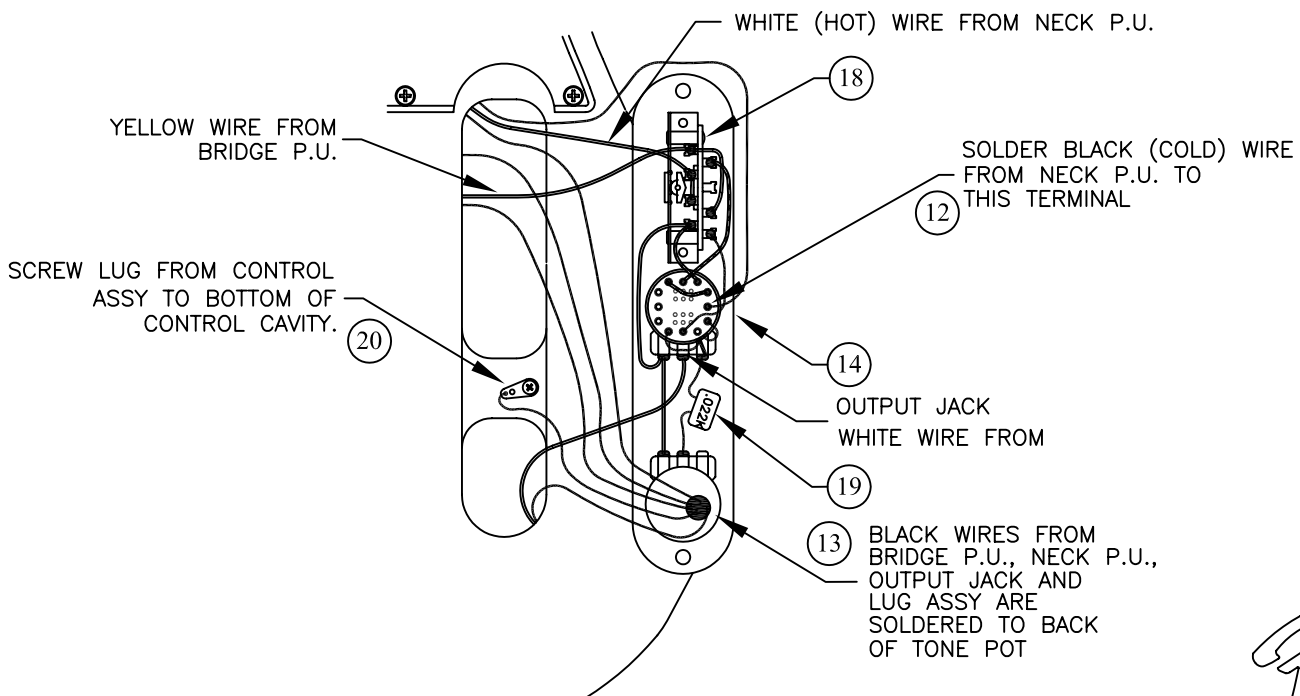

WIRING DIAGRAM

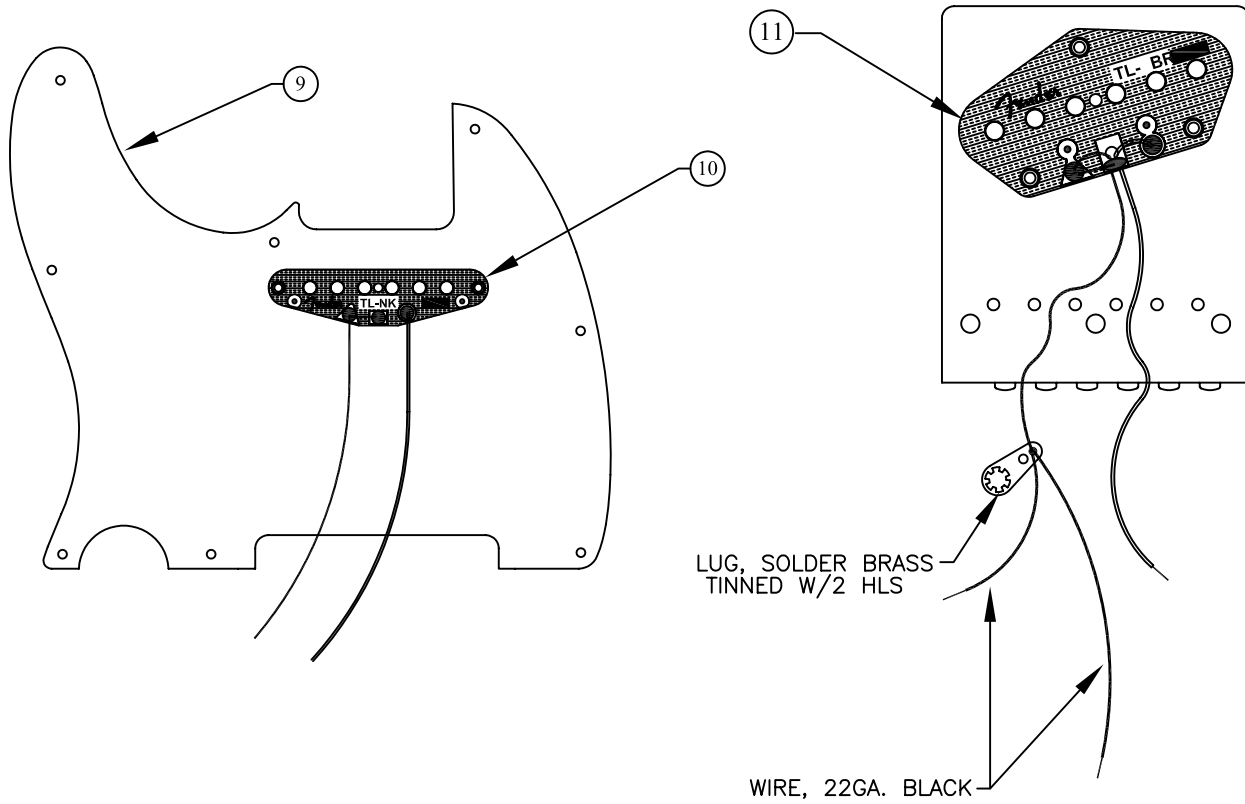

AMERICAN DELUXE TELECASTER®, MN, ASH, 0101702


REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0064135000	Neck, American Dlx Telecaster®, Ash, MN	22	0064115000	Bridge Assembly
2	0056260000	Tuning Key, Std Schl (E, B, G, D,)		0021373000	Mounting Screw
	0058815000	Washer Schalr		0061383000	Bridge Plate
	0058820000	Bushing Schalr		0058083000	Bridge Section, (6)
3	0021374000	Tuning Key, XGS-1C Std Schl		0031913000	Intonation Screw, (2) (1&2)
	0058815000	Washer Schalr		0017031000	Intonation Screw, (4) (3-6)
	0058820000	Bushing Schalr		0029095000	Intonation Spring, (2) (1&2)
4	0083675000	Bone Nut		0029094000	Intonation Spring, (4) (3-6)
5	0023811000	Truss Rod Adjusting Wrench		0018027000	Height Adjustment Screw, (2-4)
6	See Chart	Body Am Std Telecaster® Ash		0026780000	Height Adjustment Screw, (1&6)
7	0054038000	Neck Mounting Plate	23	0021429000	String Retainer
	0021424000	Mounting Screw	24	0054625000	String Guide
	0031571000	Tilt Adjustment Screw		0021407000	Mounting Screw
	0023811000	Tilt Adjusting Wrench			
8	0021453000	Strap Button			
	0021422000	Mounting Screw			
	0019056000	Felt Washer, Black			
	0020491000	Felt Washer, White			
9	See Chart	Pickguard Am Dlx Telecaster® Upgrade			
	0021407000	Mounting Screw			
10	0064110000	Pickup, Neck			
	0059319000	Mounting Screw			
	0063398000	Mounting Tube			
11	0064114000	Pickup, Bridge			
	0063396000	Mounting Screw			
	0063398000	Mounting Tube			
12	0061260000	S-1 Sw/Pot Assy 250K, Volume			
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
13	0050886000	Control 250K			
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
14	0033134000	Control Plate Telecaster®			
	0021407000	Mounting Screw			
15	0059272000	Knob, Volume			
	0059270000	Switch Cap, Volume			
	0059278000	Coupling Sleeve Sosh			
	0028897001	Mounting Set Screw			
16	0013359000	Knob, Tone			
	0028897001	Mounting Screw			
17	0018359000	Knob, Selector Switch			
18	0053290000	Switch, 3-Way			
	0021413000	Mounting Screw			
19	0024832000	Capacitor, .022uF			
20	0012869000	Solder Lug			
	0015116000	Mounting Screw			
21	0021956000	Output Jack			
	0016436000	Lock Washer			
	0016352000	Mounting Hex Nut			
	0021452000	Ferrule Chrome			
	0010355000	Retainer			

BODY & PICKGUARD COMBINATION CHART

BODY		PICKGUARD	
P/N	Color	PICKGUARD	Color
0038417503	3 Color Sunburst	0064033000	Mint/ Mint/ Mint
0038417550	Butterscotch Blonde	0064109000	Black Bakelite



SWITCH & CONTROL FUNCTION

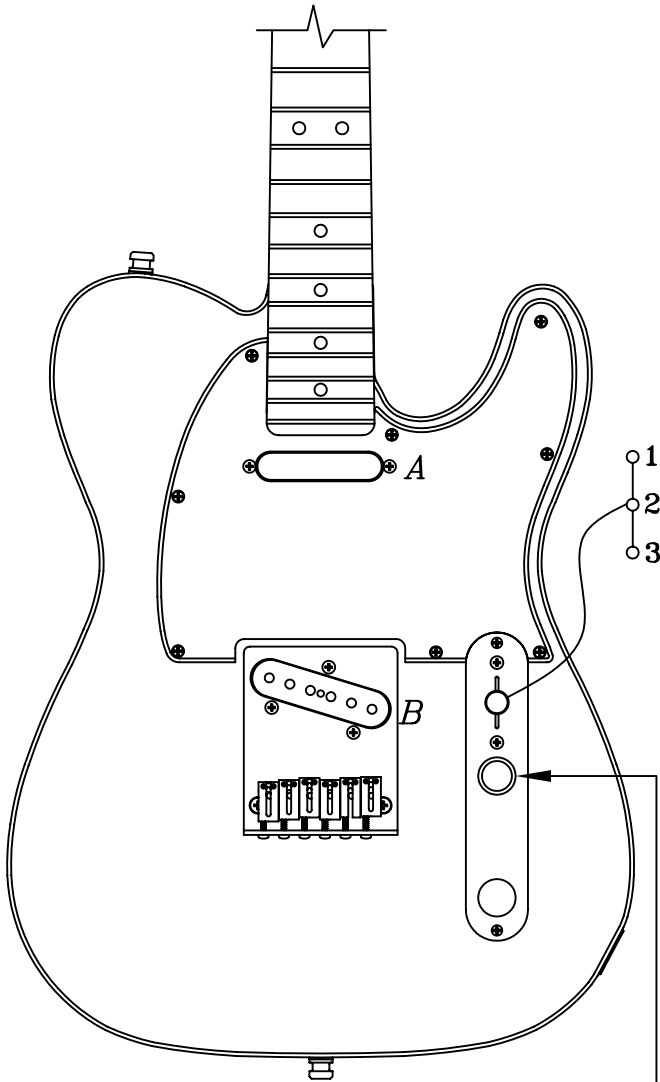

S-1 SWITCH VOLUME POT (UP & DOWN)

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (BRIDGE)

3 WAY SW POSITIONS, S-1 SWITCH UP			
			POSITION
			← NECK (A)
			← BRIDGE (B)
NECK ONLY	NECK & BRIDGE PARALLEL CONNECTION	BRIDGE ONLY	CONNECTION

3 WAY SW POSITIONS, S-1 SWITCH DOWN			
			POSITION
			← NECK (A)
			← BRIDGE (B)
NECK ONLY	NECK & BRIDGE SERIES CONNECTION	BRIDGE ONLY	CONNECTION