

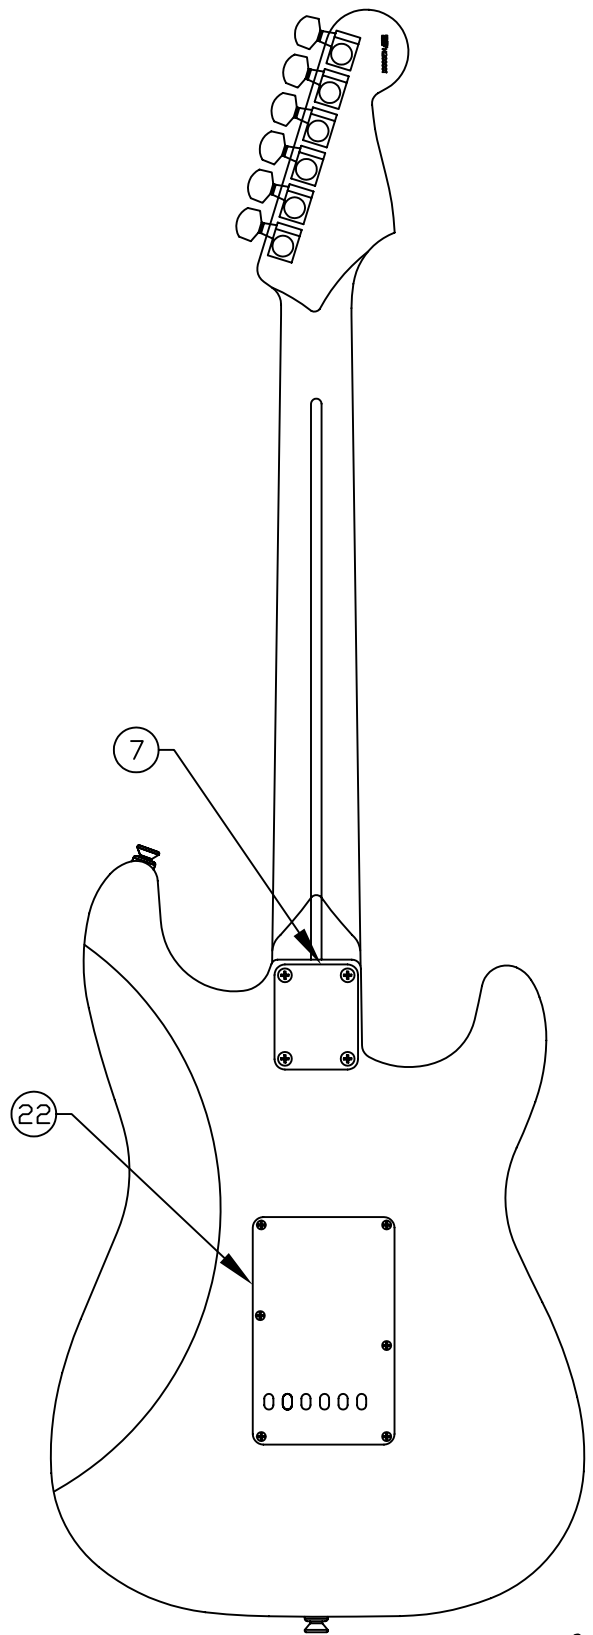


HWY 1™ STRATOCASTER LH, 011-1120/22

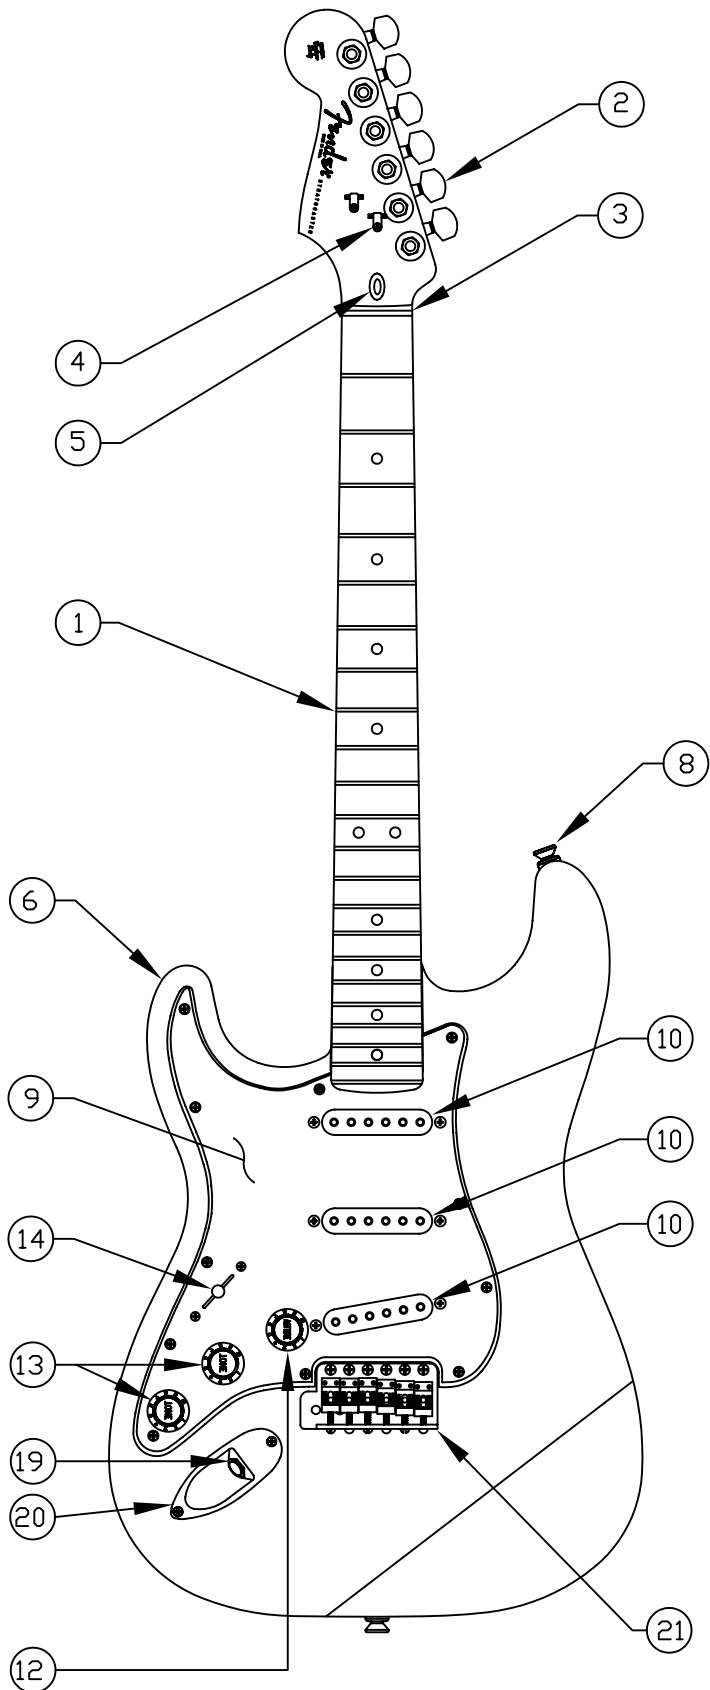


Fender®

PICKGUARD ASSEMBLY

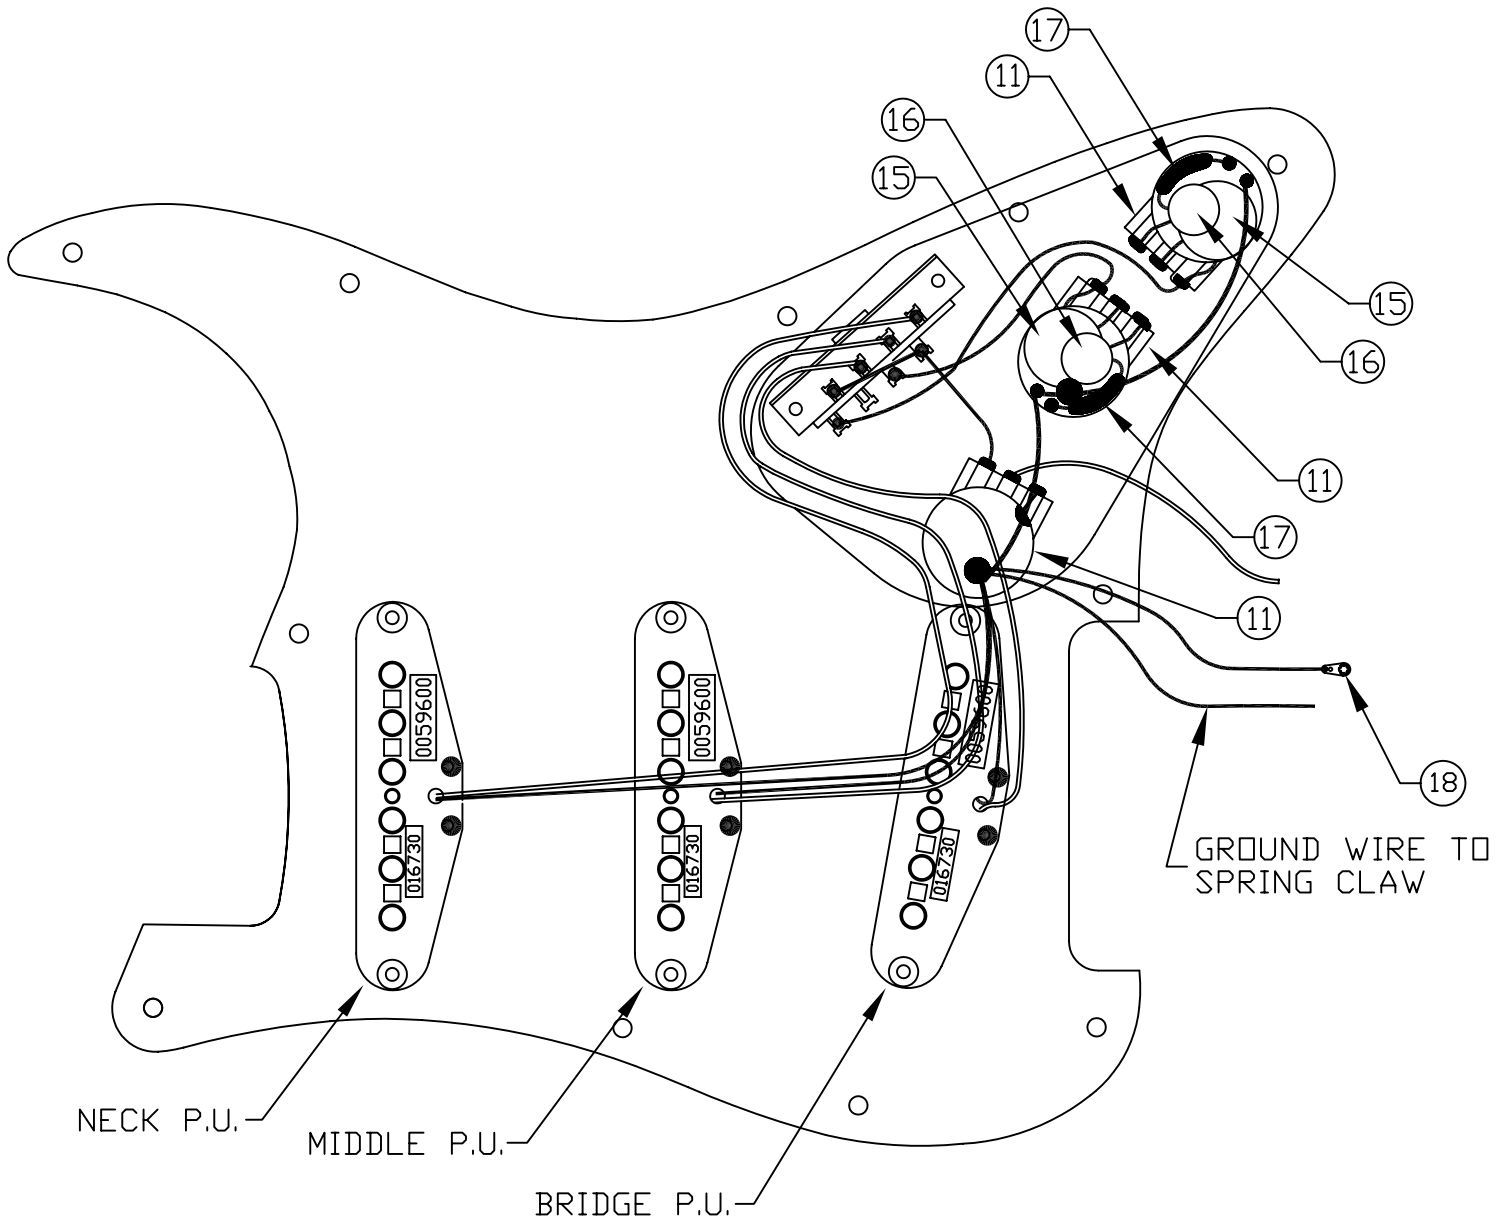

BRIDGE ASSEMBLY

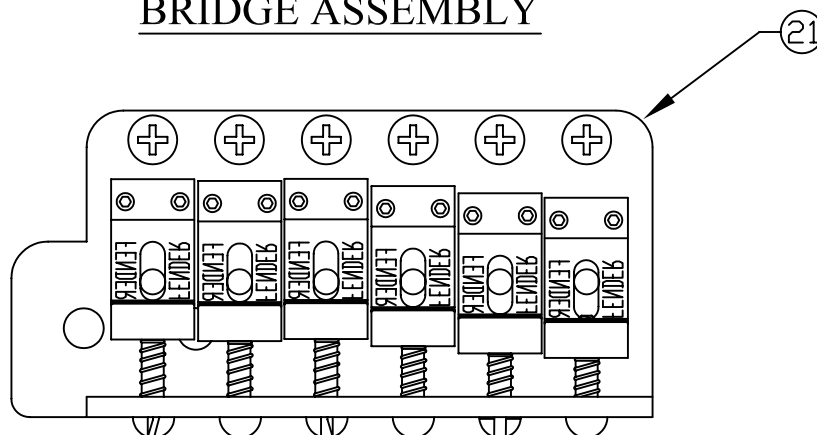

HWY 1™ STRATOCASTER LH, 011-1120/22

REF.#	P/N	DESCRIPTION
1	0060000000	Neck, Satin Finish Stratocaster, R/W
	0060001000	Neck, Satin Finish Stratocaster, M/N
2	0022151000	Tuning Key, (1) Set
	0058815000	Washer Key Ping
	0058820000	Bushing Key Ping
3	0083675000	Bone Nut
4	0021537000	String Retainer, (2)
	0011357000	Mounting Screw
5	0020810000	Truss Rod Adjustment Nut
	0023811000	Truss Rod Adjusting Wrench
6	0060002xxx	Body, Hwy 1 Strat, Alder Paint
7	0018353000	Neck Mounting Plate
	0015636000	Mounting Screw
8	0012344000	Strap Button
	0016188000	Mounting Screw
	0019056000	Felt Washer, Black
	0020491000	Felt Washer, White
9	0059599000	Pickguard, Hwy 1 Strat, White/Black/White
	0015578000	Mounting Screw
10	0059600000	Pickup Assembly, (3)
	0015776000	Mounting Screw
	0036481000	Tubing, Latex Cut
11	0013446000	Control, 250K, (3)
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
12	0056149000	Knob, Volume, Aged White
13	0056148000	Knob, Tone, Aged White, (2)
14	0053291000	Switch, Lever 5-Position
	0015776000	Mounting Screw
	0019554000	Knob, Aged White
15	0068939000	Capacitor, Ceramic Disk, .1µf, 50V, (2)
16	0069010000	Capacitor, Ceramic Disk, .02µf, 50V, (2)
17	0069011000	Resistor Metal Film, 4.7 kΩ, 1/4 Watt, (2)
18	0012869000	Ground Lug
	0015116000	Mounting Screw
19	0047329000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
20	0010280090	Jack Ferrule
	0021407000	Mounting Screw
21	0060003000	Bridge Assembly
	0016170000	Mounting Screw
22	0051504000	Tremolo Cover, White
	0015578000	Mounting Screw

BODY CHART

Part #	Color
0060002527	Sapphire Blue Transparent
0060002538	Crimson Transparent
0060002567	Honey Blonde Transparent





HWY 1™ STRATOCASTER LH, 011-1120/22

SWITCH & CONTROL FUNCTIONS

5 WAY SWITCH POSITION

5	4	3	2	1	
T1	T1	NT	T2	T2	
					← NECK PICKUP (A)
					← MIDDLE PICKUP (B)
					← BRIDGE PICKUP (C)
	PICKUP IS ON				
	PICKUP IS OFF				
A	PICKUP (NECK)				
B	PICKUP (MIDDLE)				
C	PICKUP (BRIDGE)				
NT	NO TONE				

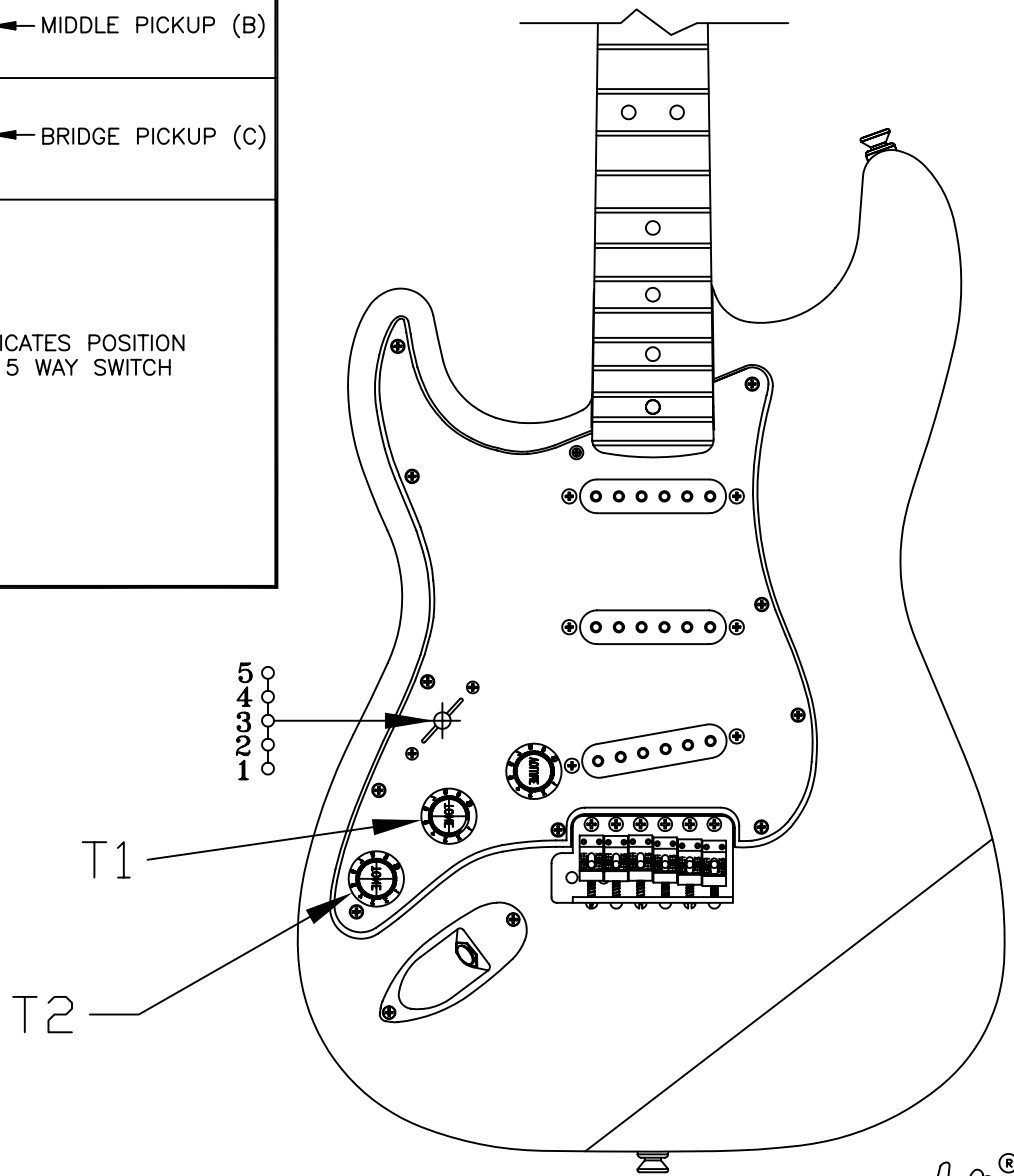

Fender®