




DELUXE PLAYER STRAT®, RW/MN, 013-3000/3002

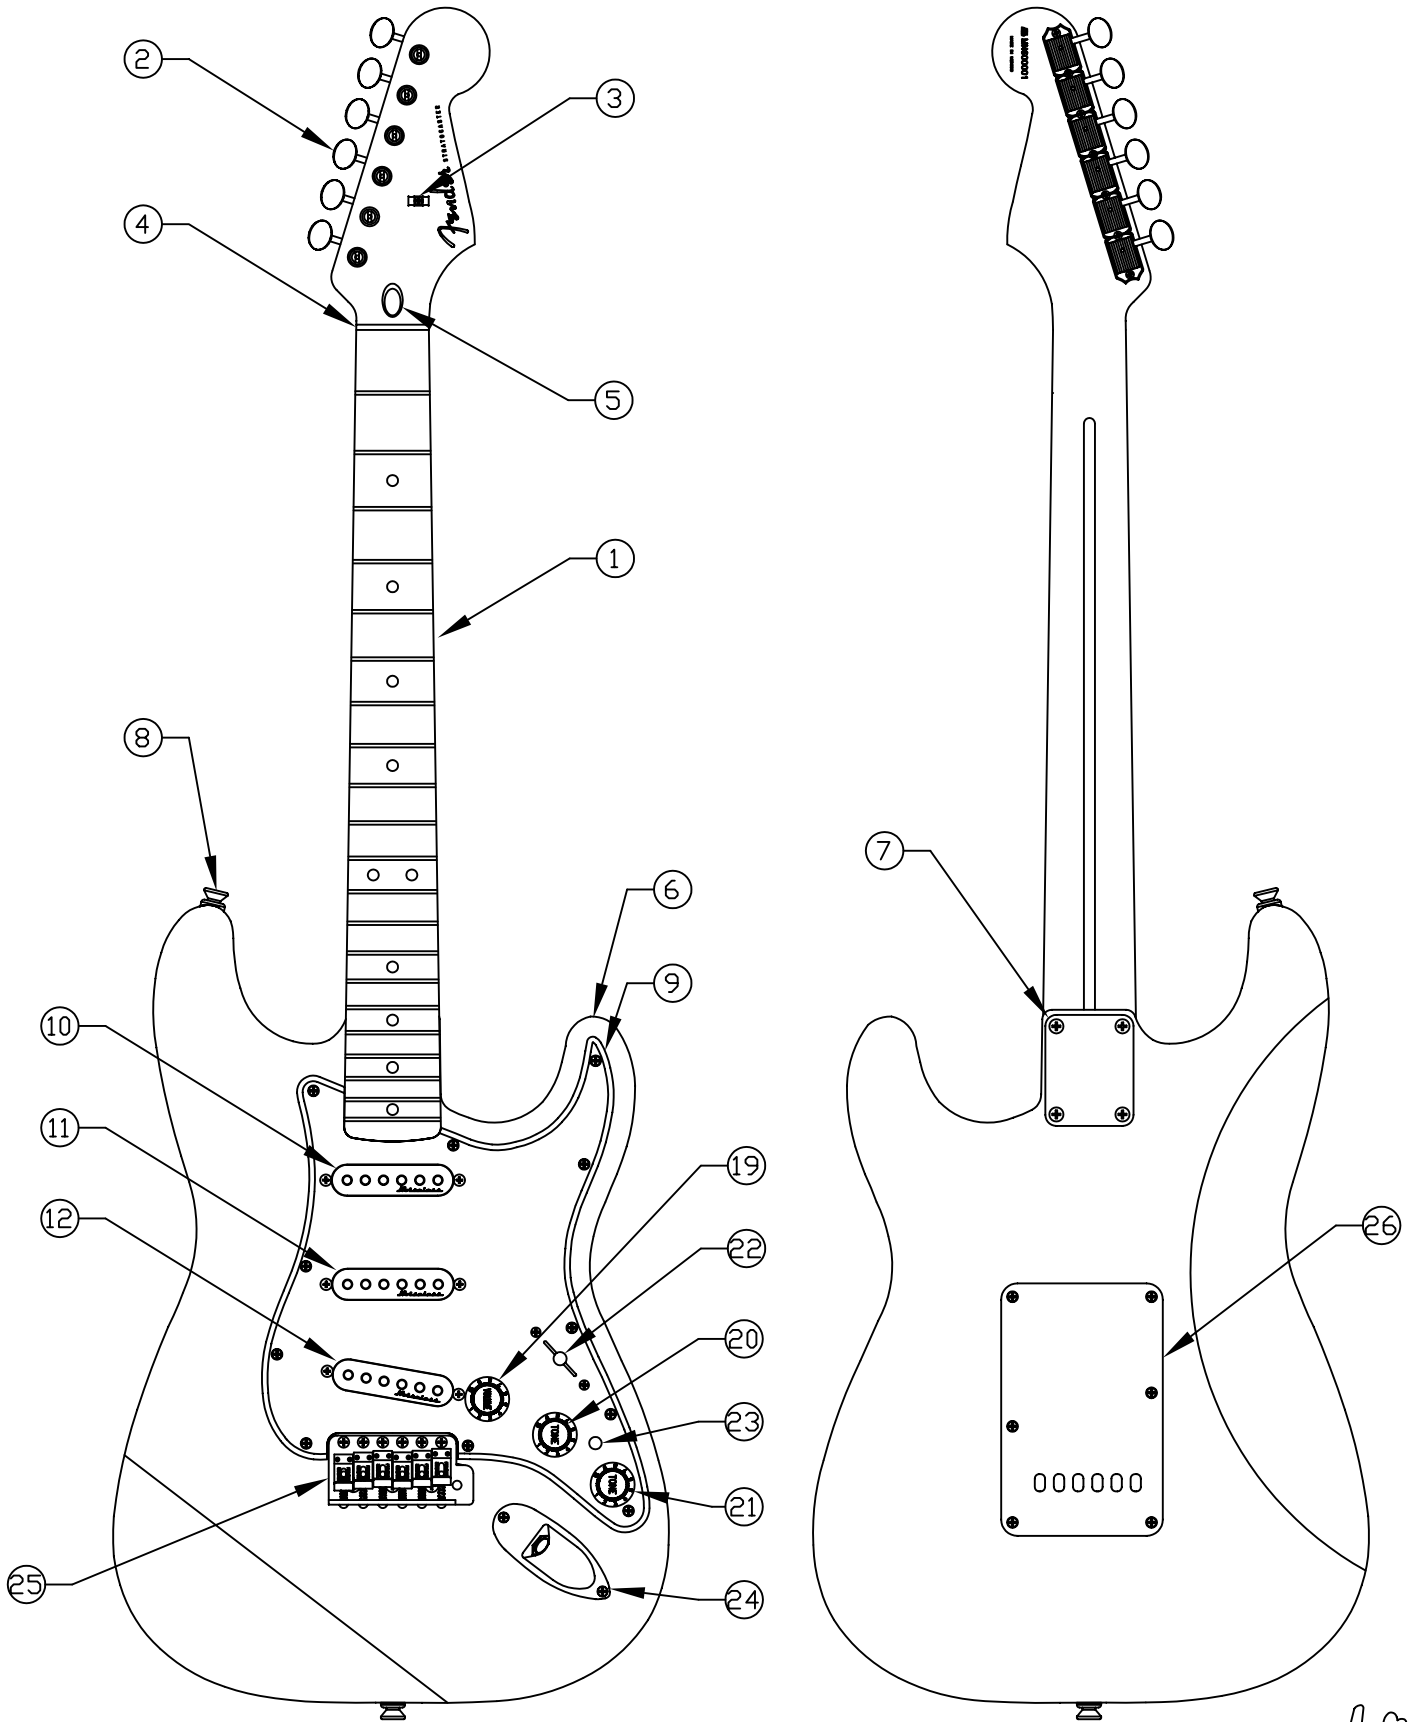


Fender®

DELUXE PLAYER STRAT®, RW/MN, 013-3000/3002

WIRING DIAGRAM

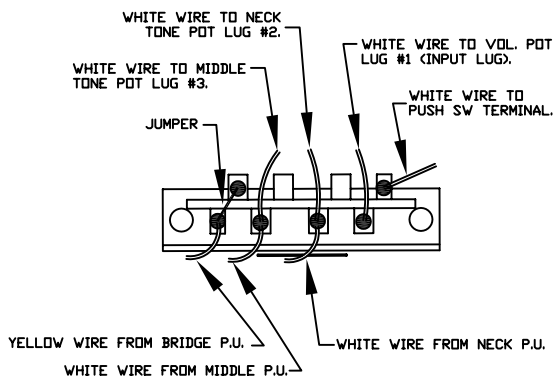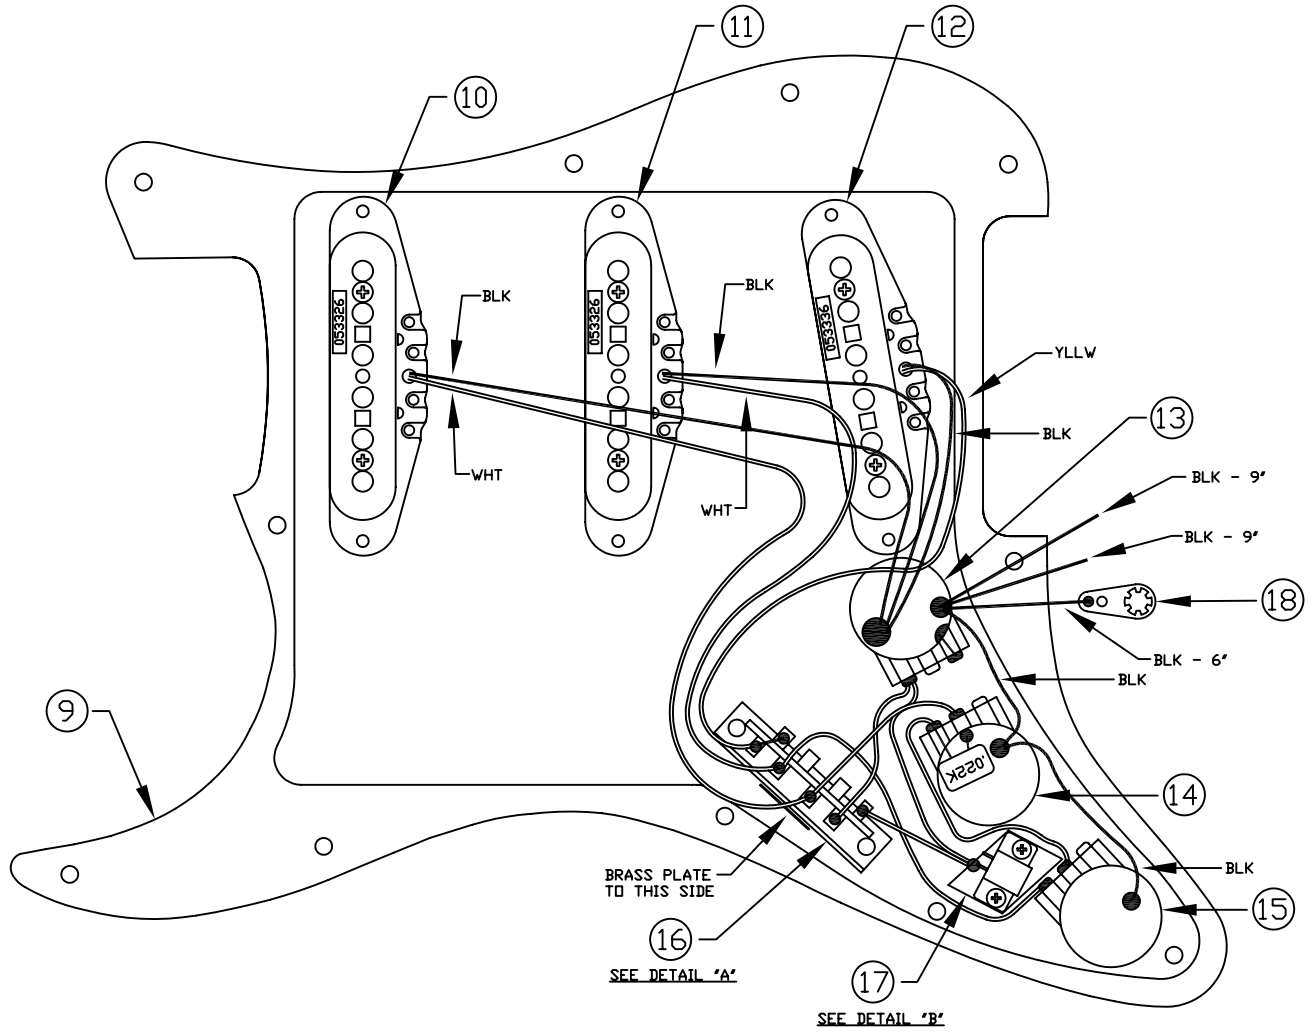

DETAIL "A" - LEVER SW WIRING

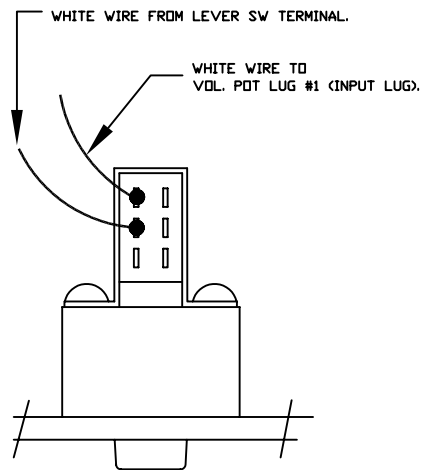

DETAIL "B" - PUSH SW WIRING/MTG.

Fender

DELUXE PLAYER STRAT® , RW/MN, 013-3000/3002

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0067965000	Neck, Deluxe Player Stratocaster®, RW	26	0050661000 0018784000	Back Plate, White, Mex Mounting Screw, Gold
	0067966000	Neck, Deluxe Player Stratocaster®, MN			
2	0053276000	Tuning Key, Gtr-Vint Gold			
	0053285000	Bushing, Key Gold			
	0018823000	Mounting Screw, Gold			
3	0018803000	String Guide, Gold			
	0018823000	Mounting Screw, Gold			
4	0083675000	Bone Nut			
5	0038467000	Truss Rod Adjusting Wrench			
6	See Chart	Body, Superstrat			
7	0053273000	Neck Mounting Plate, Gold			
	0018785000	Mounting Screw, Gold			
8	0018916000	Strap Button, Gold			
	0018789000	Mounting Screw, Gold			
	0019056000	Felt Washer, Black			
	0020491000	Felt Washer, White			
9	0053165000	Pickguard, Deluxe Strat, Brown Shell			
	0018784000	Mounting Screw, Gold			
10	0058018000	Pickup, NF, White, Neck			
	0049728000	Mounting Screw, Gold			
	0055172000	Mounting Tube			
11	0058018000	Pickup, NF, White, Mid			
	0049728000	Mounting Screw, Gold			
	0055172000	Mounting Tube			
12	0058019000	Pickup, NF, White, Bridge			
	0049728000	Mounting Screw, Gold			
	0055172000	Mounting Tube			
13	0013446000	Control 250K, Volume			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
14	0056244000	Control 500K, A-Taper			
	0024832000	Capacitor .022 µF			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
15	0056244000	Control 500K, A-Taper			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
16	0053291000	Selector Switch, 5 Way			
	0018790000	Mounting Screw			
17	0020803000	Switch Block, DPDT Push-Push			
	0038462000	Switch Block			
	0021404000	Mounting Screw			
18	0012869000	Solder Lug			
	0015116000	Mounting Screw			
19	0056149000	Knob, White, Volume			
20	0056148000	Knob, White, Neck Tone			
21	0056148000	Knob, White, Middle Tone			
22	0019554000	Knob, Selector Switch, White			
23	0022602000	Knob, Push-Push Switch, Parchment			
24	0047329000	Output Jack, 1/4"			
	0016436000	Lock Washer			
	0018824000	Mounting Hex Nut			
	0053274000	Jack Ferrule, Gold			
	0018784000	Mounting Screw, Gold			
25	0053275000	Bridge/Tremolo Assy, Gold			
	0018787000	Mounting Screw, Gold			
	0012180000	Spring			
	0031643000	Tremolo Spring			
	0050918000	Holder Spring			
	0015636000	Holder Spring Mounting Screw			


BODY CHART

P/N	COLOR
0053169500	3 COLOR SUNBURST
0053169538	CRIMSON RED TRANSPARENT
0053169567	HONEY BLONDE
0053169527	SAPPHIRE BLUE TRANSPARENT



DELUXE PLAYER STRAT®, RW/MN, 013-3000/3002

SWITCH & CONTROL FUNCTION

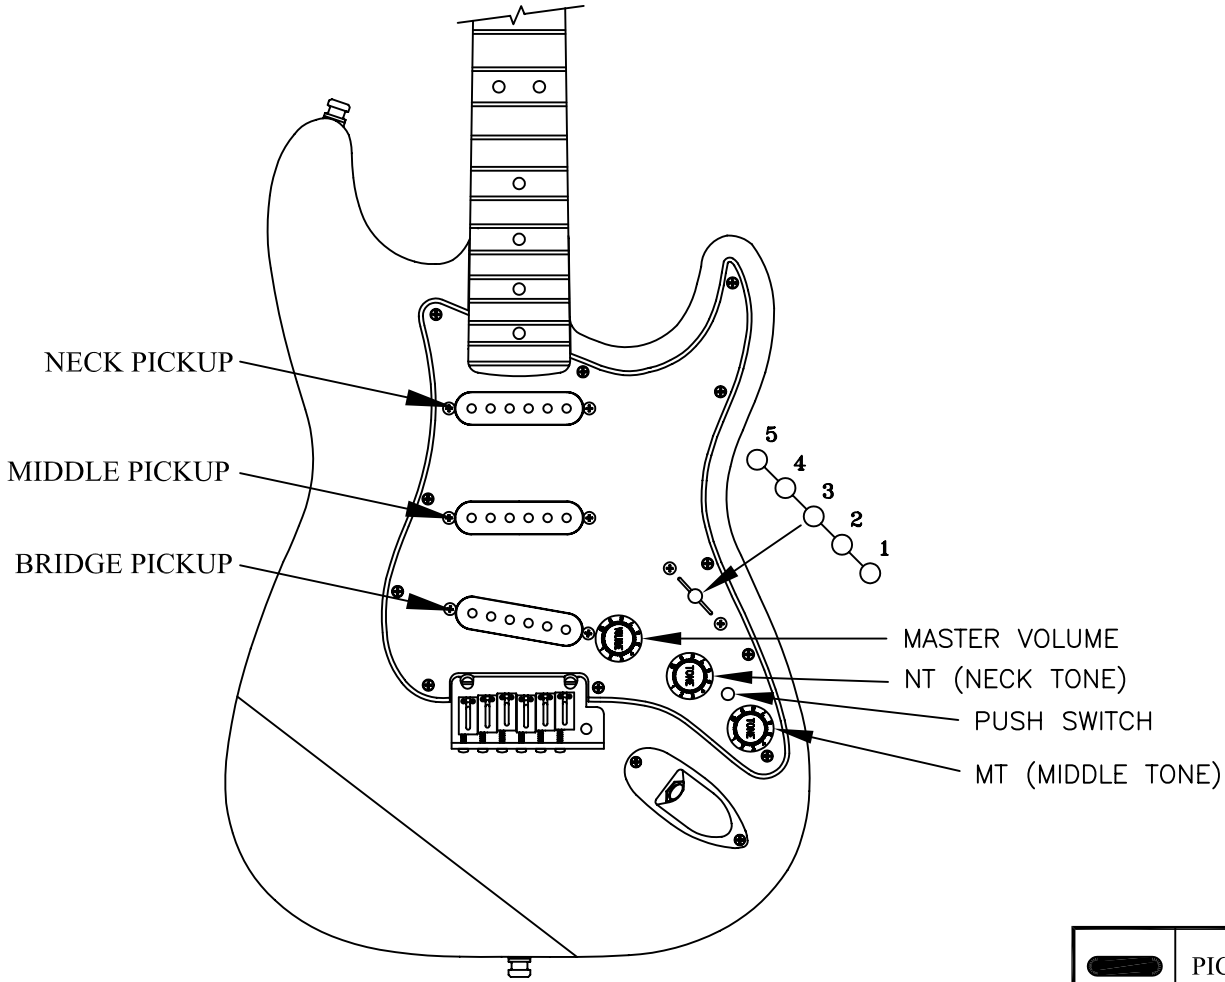

	PICKUP IS ON
	PICKUP IS OFF

5 WAY SWITCH POSITION

PUSH SWITCH UP					PUSH SWITCH DOWN					
										← 5 WAY SWITCH POSITION
T 1	T1&T2	T 2	T 2	-	T 1	T1&T2	T 2	T 2	-	← TONE CONTROL
										← NECK PICKUP
										← MIDDLE PICKUP
										← BRIDGE PICKUP

