


NASHVILLE POWER TELECASTER 0135000/5002

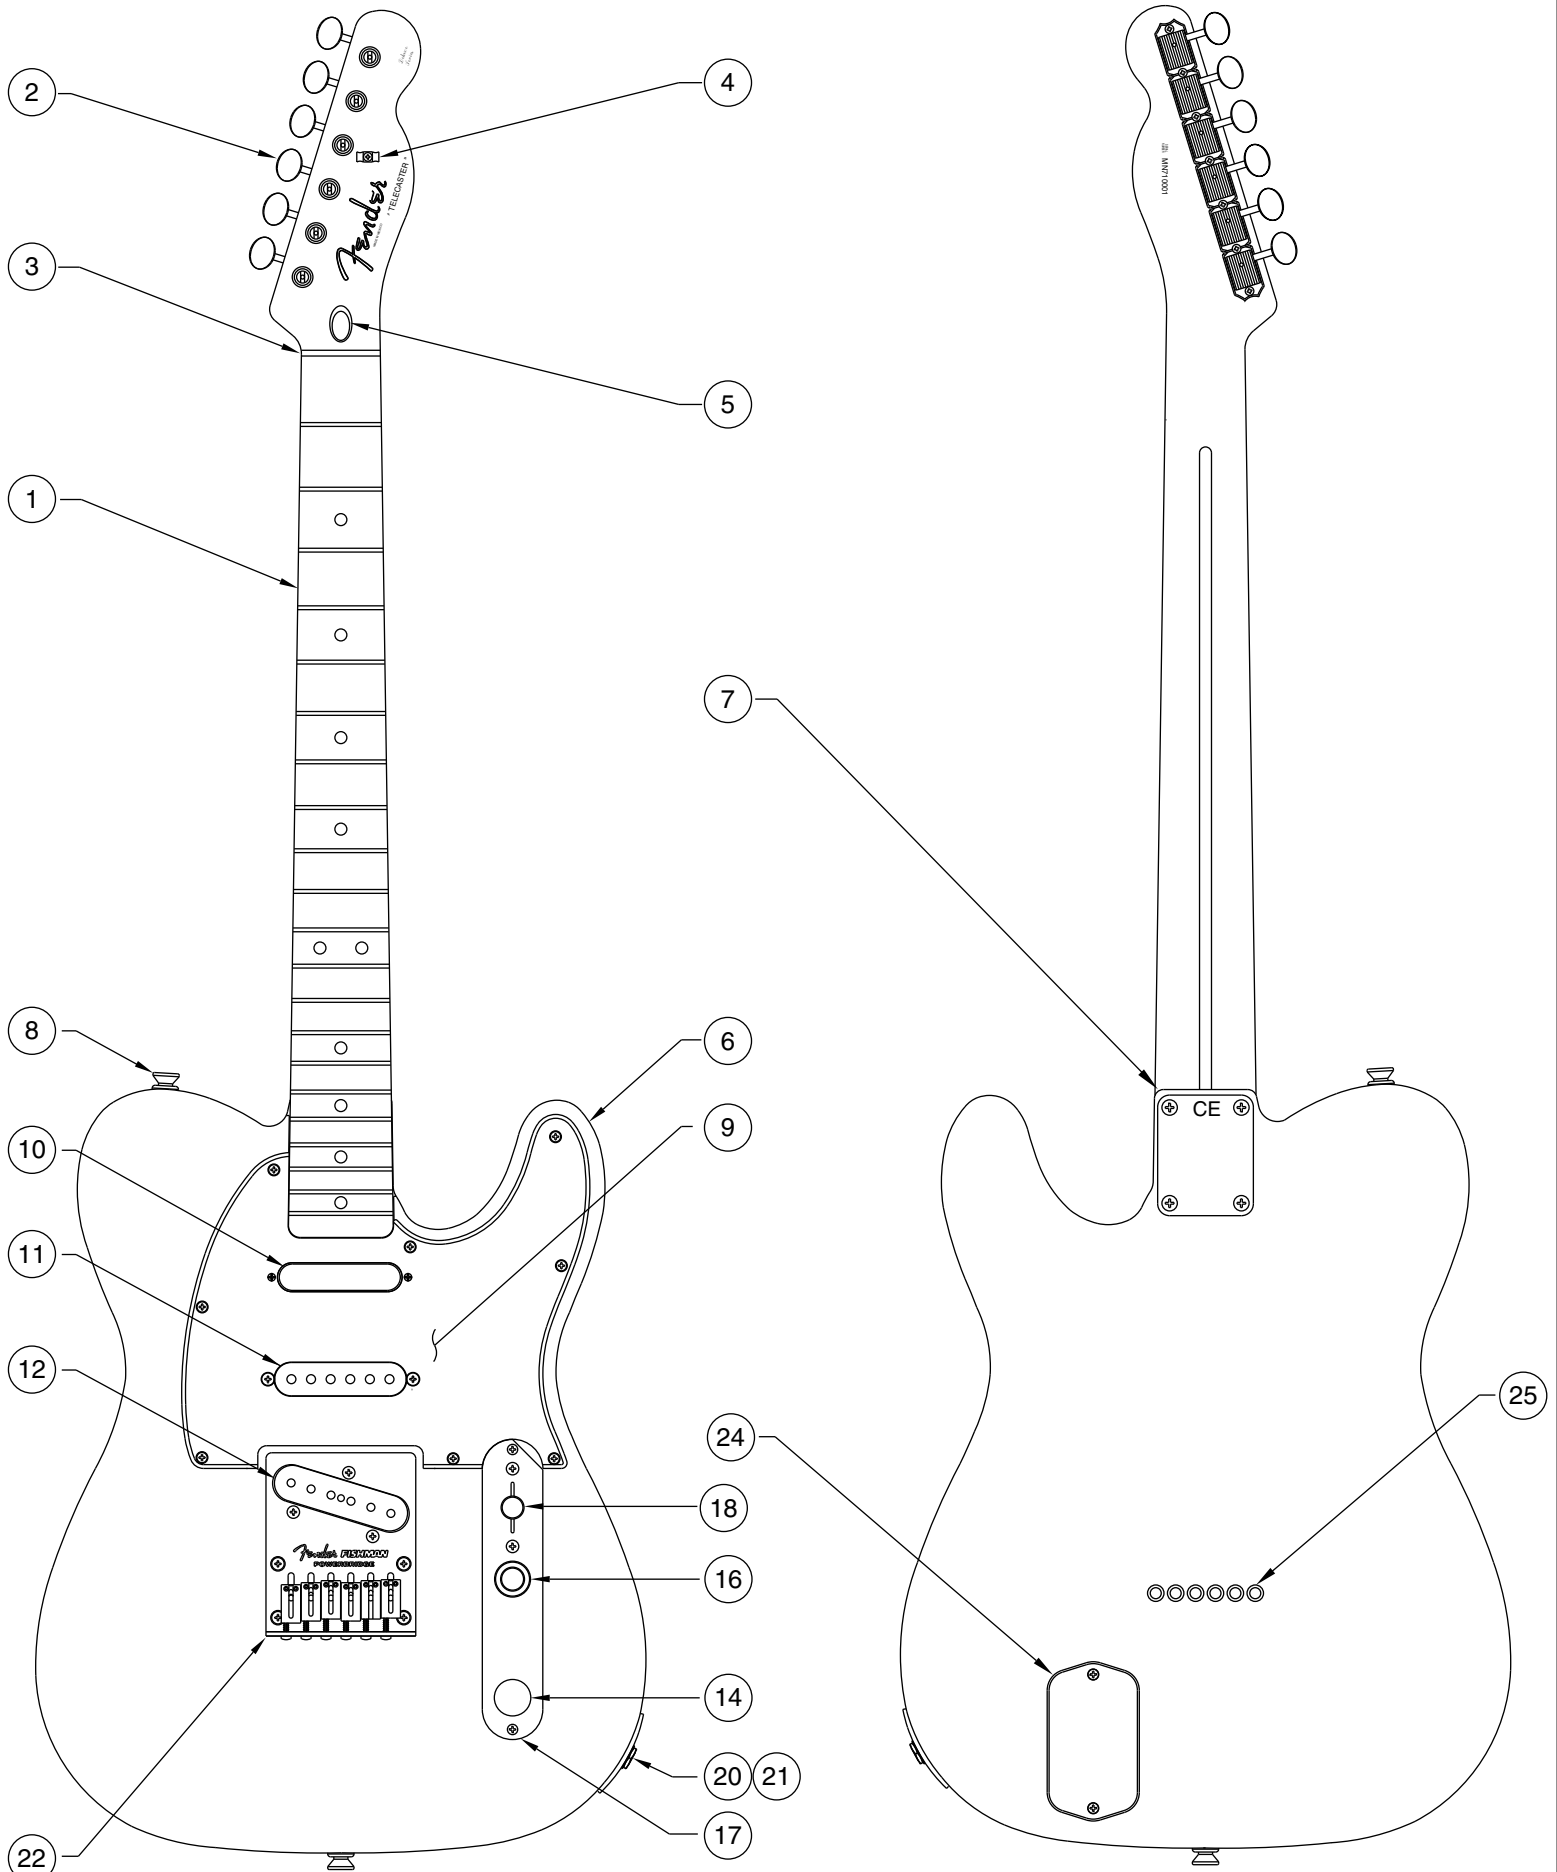

NASHVILLE POWER TELECASTER 0135000/5002

CONTROL ASSEMBLY

WHITE WIRE FROM
BRIDGE PICKUP TO
5 WAY SWITCH

YELLOW WIRE FROM
MIDDLE PICKUP TO
5 WAY SWITCH

WHITE WIRE FROM
NECK PICKUP TO
5 WAY SWITCH

RED WIRE FROM
BATTERY SNAP

BATTERY SNAP

SOLDER BLACK WIRE FROM
BATTERY SNAP TO TERMINAL
#1 OF OUTPUT JACK ASS'Y


ACOUSTIC PICKUP
FOR EACH BRIDGE
SECTION (6)

BRIDGE SECTION
N.T.S.

SEE DETAIL " A "

23

BRIDGE ASSEMBLY

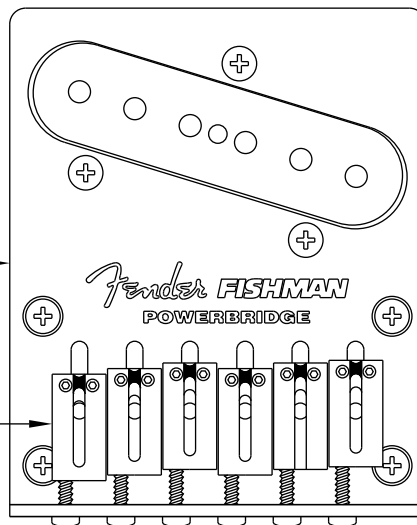

15

19

SOLDER BLACK WIRE FROM NECK PICKUP
RED FROM MIDDLE PICKUP
BLACK WIRE FROM BRIDGE PICKUP
TO BACK OF CONTROL POT

INSTALL SHRINK TUBING OVER ENTIRE
LENGTH OF PIEZO CABLE BEFORE
SOLDER TO POWERCHIP

STRIP PIEZO SHIELD TO ALLOW 1/4" OF
INSULATOR ON LEAD WIRE AND SOLDER
TO GROUND PAD ON POWERCHIP


SOLDER BLACK LEAD WIRE FROM PIEZO
CABLE TO PIEZO IN ON POWERCHIP

13

SOLDER WHITE WIRE FROM
POWERCHIP ASS'Y TO TERMINAL #8
OF OUTPUT JACK ASS'Y


SOLDER SHIELD FROM POWERCHIP
ASS'Y TO TERMINAL #2 OF OUTPUT
JACK ASS'Y L=.300 TO AVOID SHORT

SOLDER RED WIRE FROM POWERCHIP
ASS'Y TO TERMINAL #4 OF OUTPUT
JACK ASS'Y

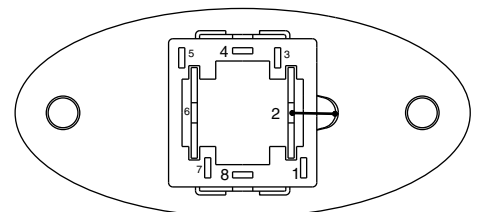


**OUTPUT JACK
TERMINAL DETAIL**
BOTTOM VIEW : N.T.S.

NASHVILLE POWER TELECASTER 0135000/5002
FISHMAN PREAMP POWERCHIP (WIRING DETAIL)

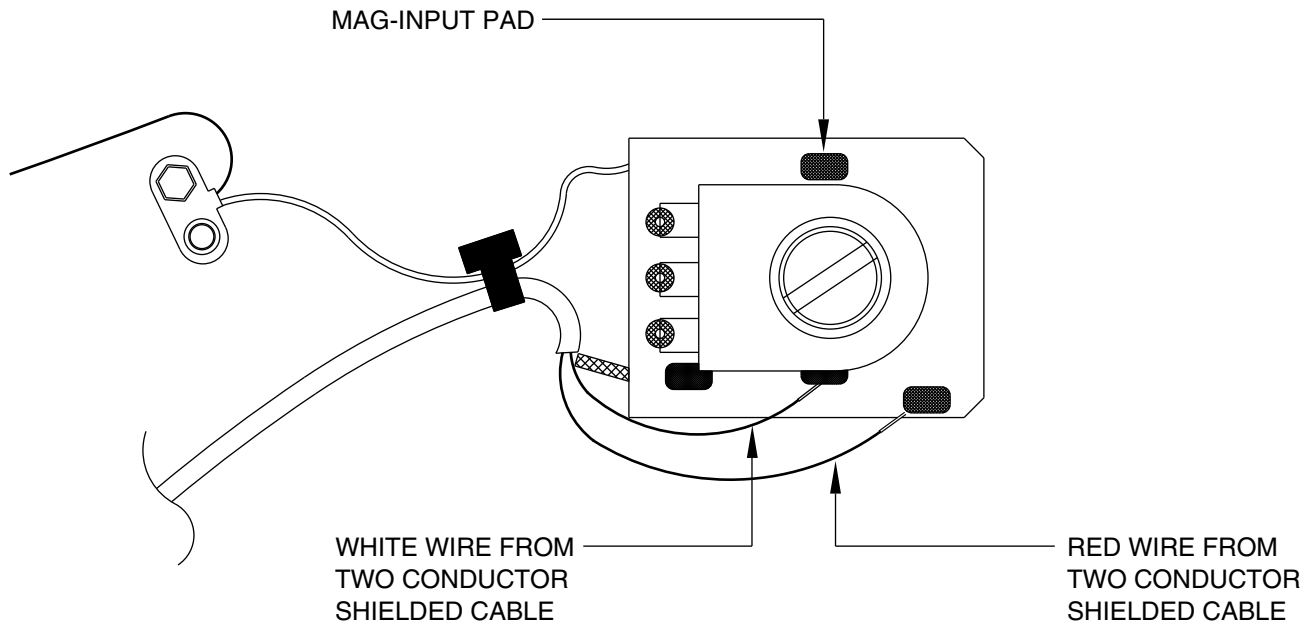

TOP VIEW
SCALE: N.T.S.

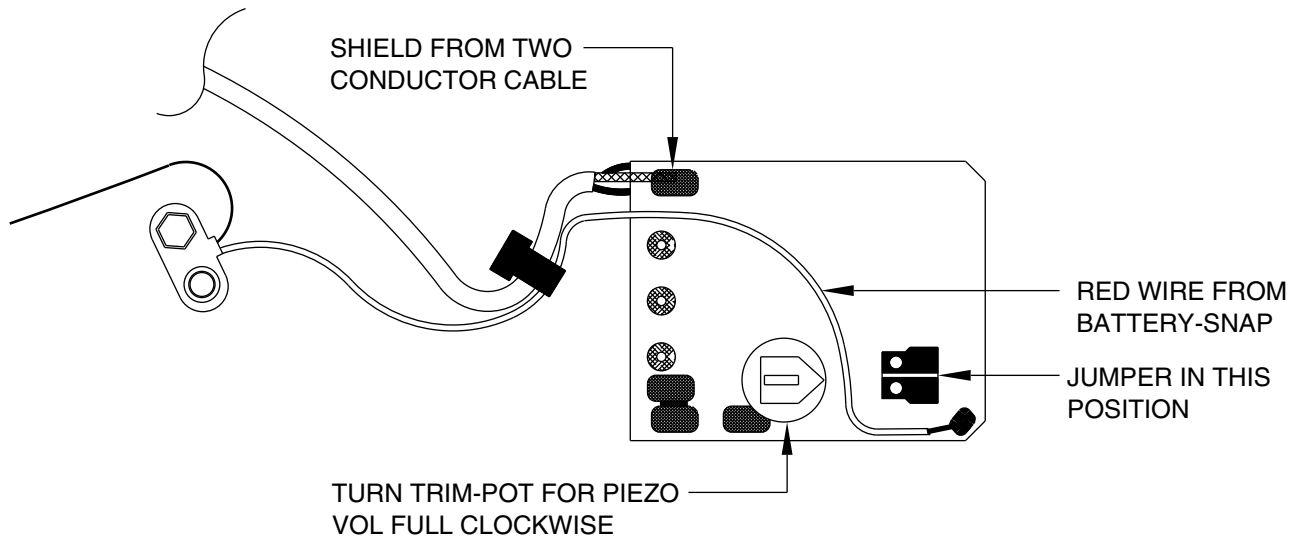

BOTTOM VIEW
SCALE: N.T.S.

NASHVILLE POWER TELECASTER 0135000/5002

REF.#	P/N	DESCRIPTION
1	0053142000	Neck, Deluxe Telecaster 1, R/W
	0047318000	Neck, Deluxe Telecaster 1, M/N
2	0047912000	Tuning Key, (1) Set, W/Bushing
3	0083675000	Bone Nut
4	0010389000	String Retainer
	0011357000	Mounting Screw
5	0038454000	Truss Rod Adjustment Nut
	0038467000	Truss Rod Adjusting Wrench
6	0056049xxx	Body, Nash Prw Tele., Sunburst
	0056050xxx	Body, Nash Prw Tele., Solid Color
7	0018353000	Neck Mounting Plate
	0015636000	Mounting Screw
8	0012344000	Strap Button
	0015610000	Mounting Screw
	0019056000	Felt Washer, Black
	0020491000	Felt Washer, White
9	0048637000	Pickguard, TelePlus, Shell
	0015578000	Mounting Screw
10	0053112000	Pickup, Neck, Texas Mexico Telecaster
	0021409000	Mounting Screw
	0036878000	Tubing, Latex Cut
11	0053150000	Pickup, Middle, Texas Mexico Telecaster
	0048631000	Mounting Screw
	0036481000	Tubing, Latex Cut
12	0050893000	Pickup, Bridge, Texas Mexico Telecaster, Special
	0048631000	Mounting Screw
	0036878000	Tubing, Latex Cut
13	0056053000	Preamp, Fishman Powerchip Assembly, W/washer & nut
14	0013359000	Knob, Knurled Chrome
	0028897001	Set Screw
15	0019268000	Control Concentric, 250 & 500K
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
16	0056303000	Knob, Lower, Knurled Chrome
	0028897001	Set Screw
	0049458000	Knob, Upper, Knurled Chrome
	0050101000	Set Screw
17	0040778000	Control Plate
	0015578000	Mounting Screw
18	0053291000	Switch, Lever 5-Position
	0021413000	Mounting Screw
	0018359000	Knob, Black
19	0024832000	Capacitor, .022uf
20	0056055000	Output Jack, W/Hex Nut & Flat Washer
	0015578000	Mounting Screw
	0016436000	Lock Washer, Intl
21	0050100000	Jack Ferrule
22	0056052000	Bridge Assembly, Nashville Power Tele
	0016188000	Mounting Screw
	0018531000	Adjusting Wrench, Saddle Height
23	0056051000	Bridge Plate
24	0049705000	Back Cover, Battery
	0030654000	Mounting Screw
	0018556000	Foam weatherstrip
	0030688000	Insert
25	0021429000	Ferrule, String Retainer

Body Part Number	
0056049532	Brown Sunburst
0056050506	Black
0056050509	Candy Apple Red
0056050580	Arctic White