



'72 TELECASTER® DELUXE, 013-7702

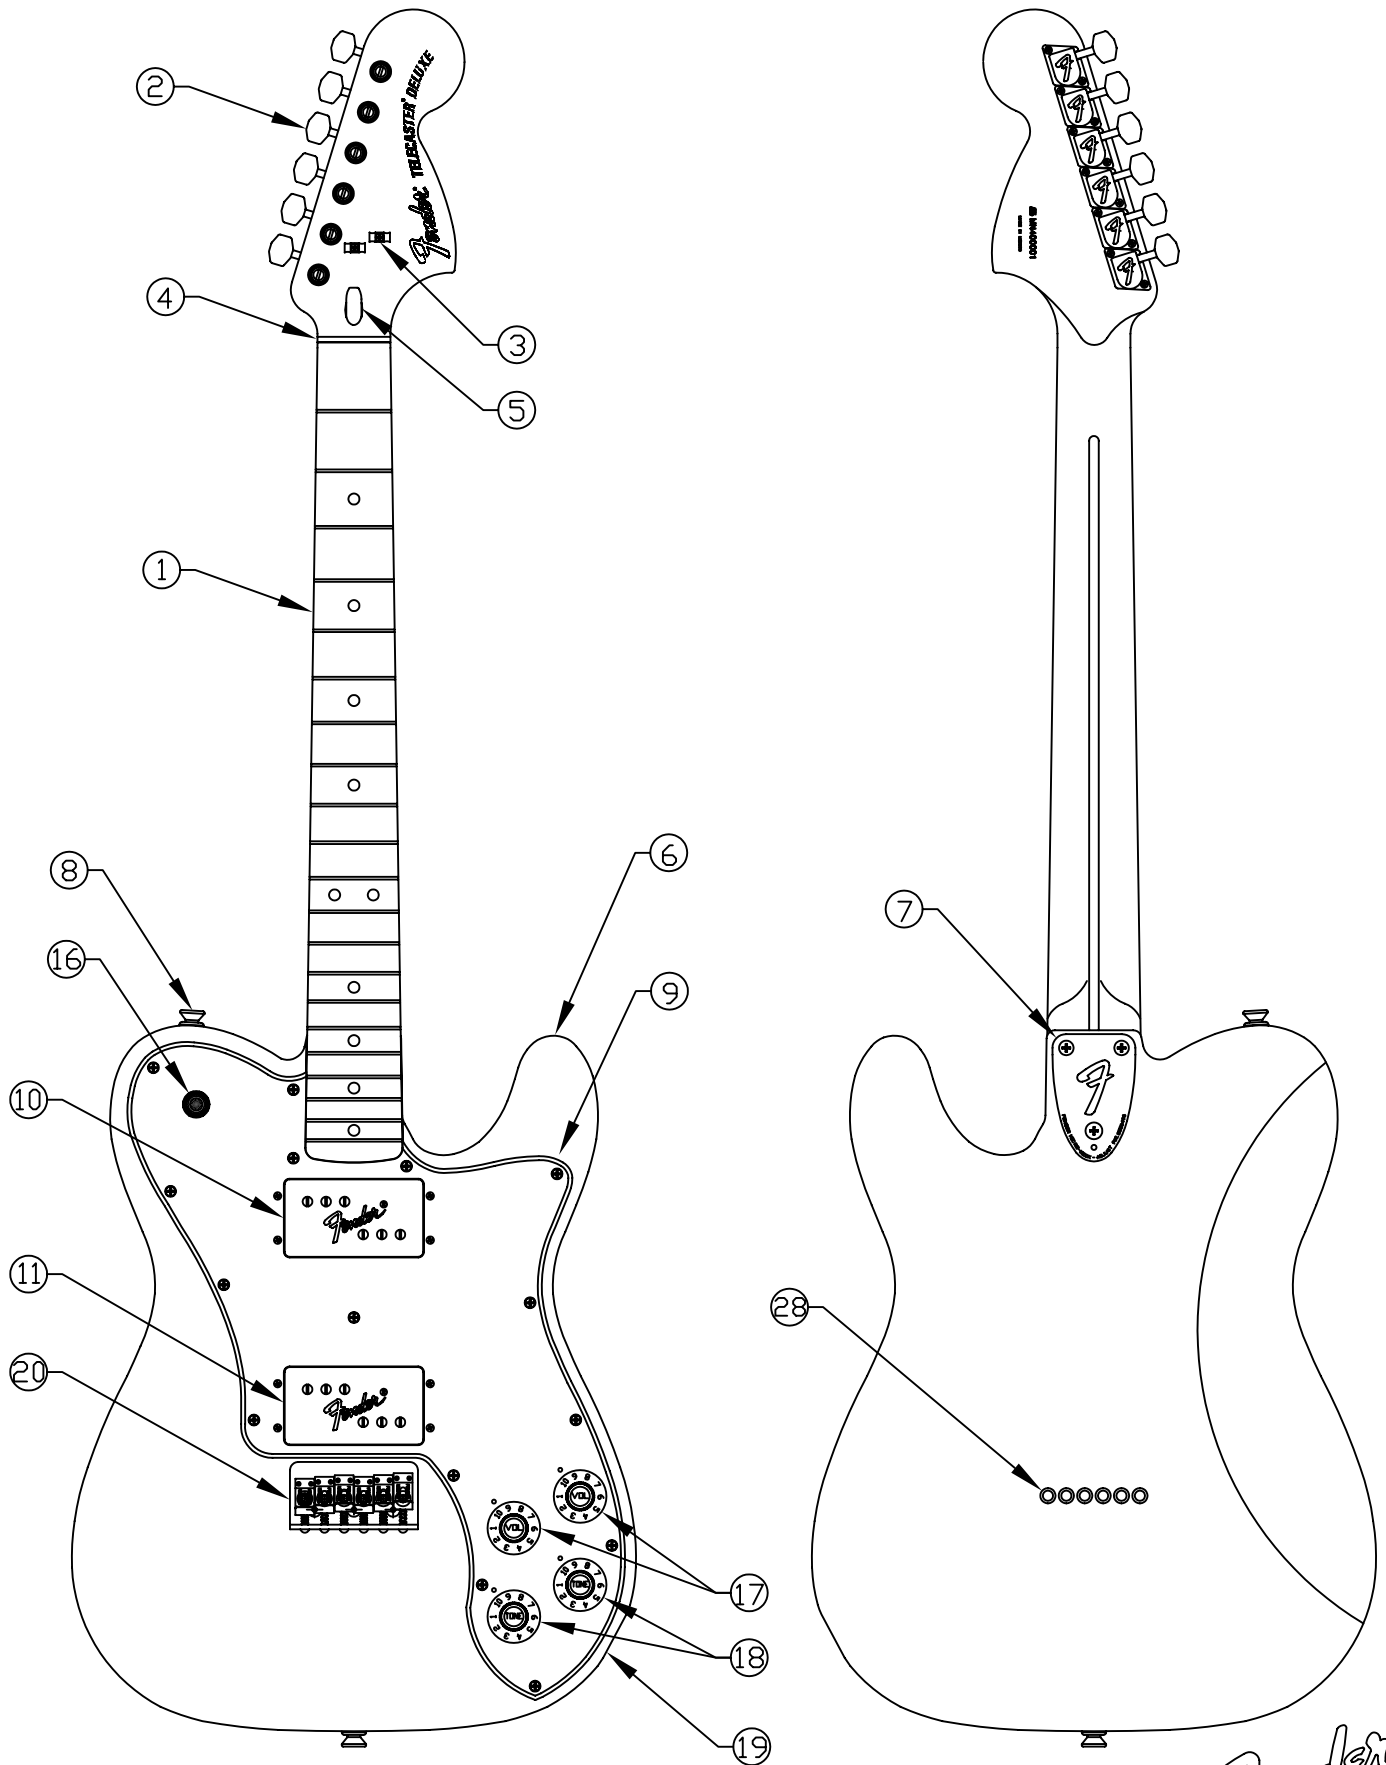


Fender®

'72 TELECASTER® DELUXE, 013-7702

WIRING DIAGRAM

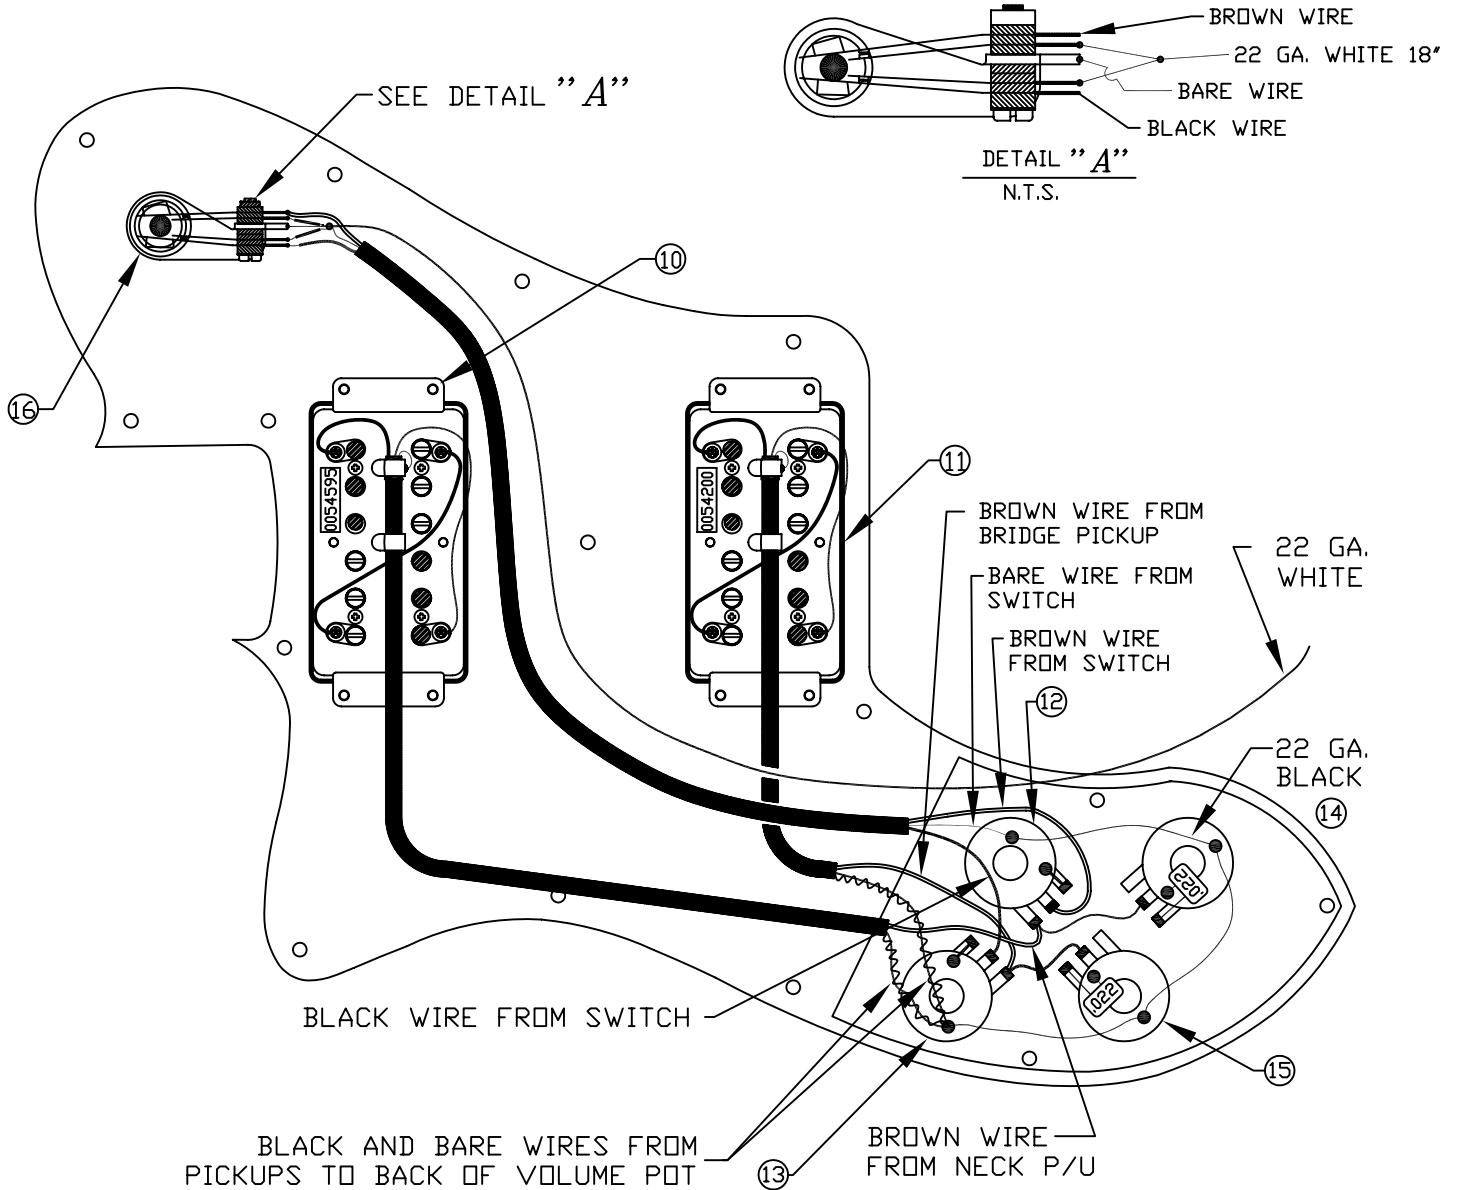

BRIDGE ASSY - NON TREMOLE

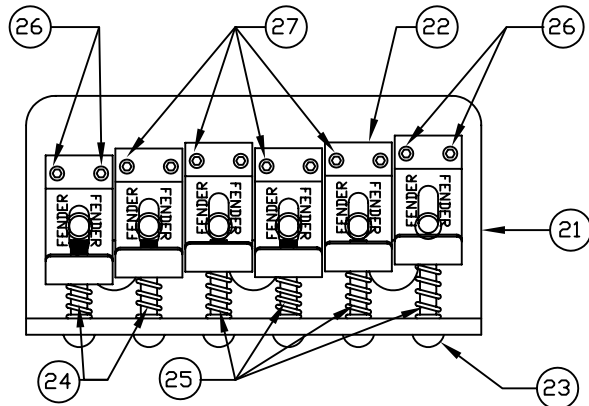

Fender

'72 TELECASTER® DELUXE, 013-7702

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0064307000	Neck, '72 Tele Deluxe, MN	20	0037592000	Bridge Assembly
2	0053684000	Tuning Key, Schaller "F", RH CHR		0016188000	Mounting Screw
	0011357000	Mounting Screw		0018531000	Bridge Adjustment wrench
3	0010389000	String Guide	21	0010322000	Bridge Plate
	0020423000	Spacer STR Tree	22	0019280000	Bridge Section, (6)
	0011358000	Mounting Screw	23	0015693000	Intonation Screw, (6)
4	0083675000	Bone Nut	24	0019273000	Intonation Spring, (5&6)
5	0010286000	Truss Rod Adj-Bullet Nut	25	0019281000	Intonation Spring, (1-4)
	0023811000	Truss Rod Adjusting Wrench	26	0032782000	Height Adjustment Screw, (1&6)
6	See Chart	Body, Tele Deluxe	27	0016071000	Height Adjustment Screw, (2-5)
7	0054525000	Neck Mounting Plate, 3 Bolt Tilt Adj	28	0021429000	String Retainer
	0015636000	Mounting Screw			
	0012156000	Tilt Adjustment Screw			
	0018622000	Tilt Adjusting Wrench			
8	0012344000	Strap Button			
	0015610000	Mounting Screw			
9	0064311000	Pickguard, '72 Tele Custom B/W/B			
	0015578000	Mounting Screw			
10	0054595000	Pickup, HB '72 Tele, Neck			
	0050166000	Mounting Screw			
	0050167000	Mounting Spring			
11	0054200000	Pickup, HB '72 Tele, Bridge			
	0050166000	Mounting Screw			
	0050167000	Mounting Spring			
12	0019064000	Control 250K, Neck Volume			
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
13	0019064000	Control 250K, Bridge Volume			
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
14	0019064000	Control 250K, Neck Tone			
	0024832000	Capacitor, .022μF			
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
15	0019064000	Control 250K, Bidge Tone			
	0024832000	Capacitor, .022μF			
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
16	0053694000	Switch, 3-Way Toggle			
17	0054521000	Knob, Vol '72 Tele Custom			
18	0054522000	Knob, Tone '72 Tele Custom			
19	0047329000	Output Jack			
	0016436000	Lock Washer			
	0016352000	Mounting Hex Nut			
	0021452090	Jack Ferrule			
	0010355000	Retainer			

BODY CHART

P/N	COLOR
0064309700	3 COLOR SUNBURST
0064308706	BLACK
0064309792	WALNUT



'72 TELECASTER® DELUXE, 013-7702

SWITCH & CONTROL FUNCTION

3 WAY SWITCH POSITION			
3 ●—○—○	2 ○—●—○	1 ○—○—●	← 3 WAY SWITCH POSITION
■	■	□	← NECK PICKUP
□	■	■	← BRIDGE PICKUP
■ PICKUP IS ON		□ PICKUP IS OFF	

