
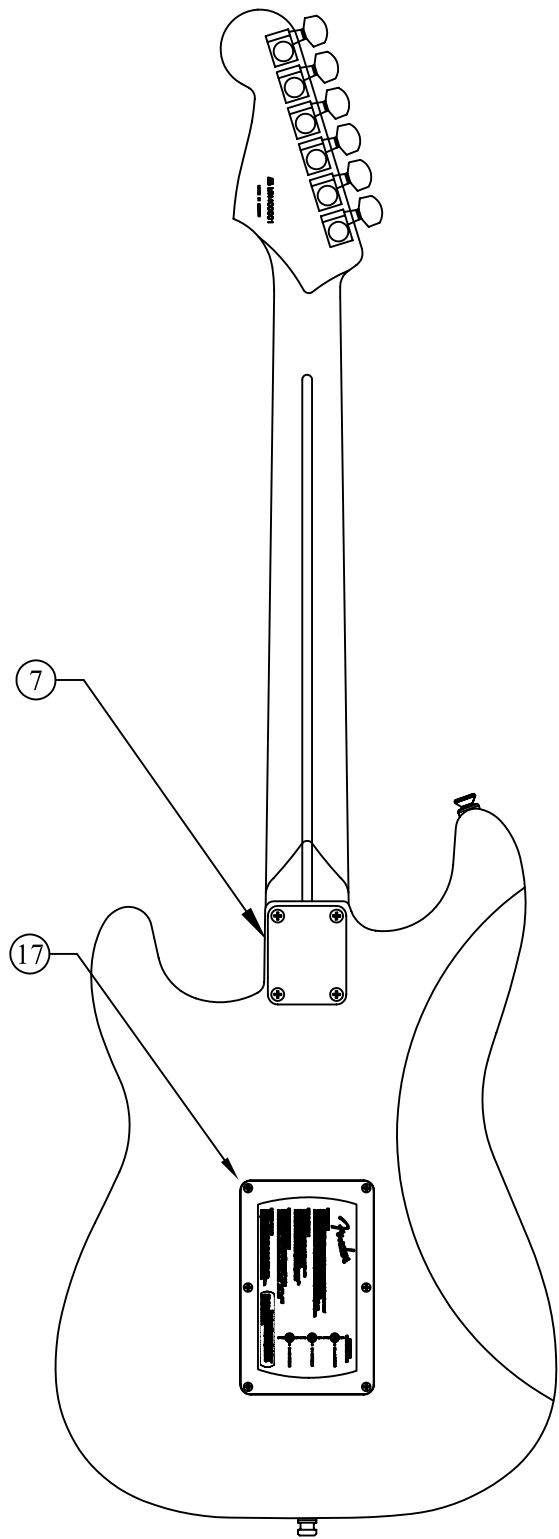



ACOUSTASONIC™ STRAT®, 013-9700

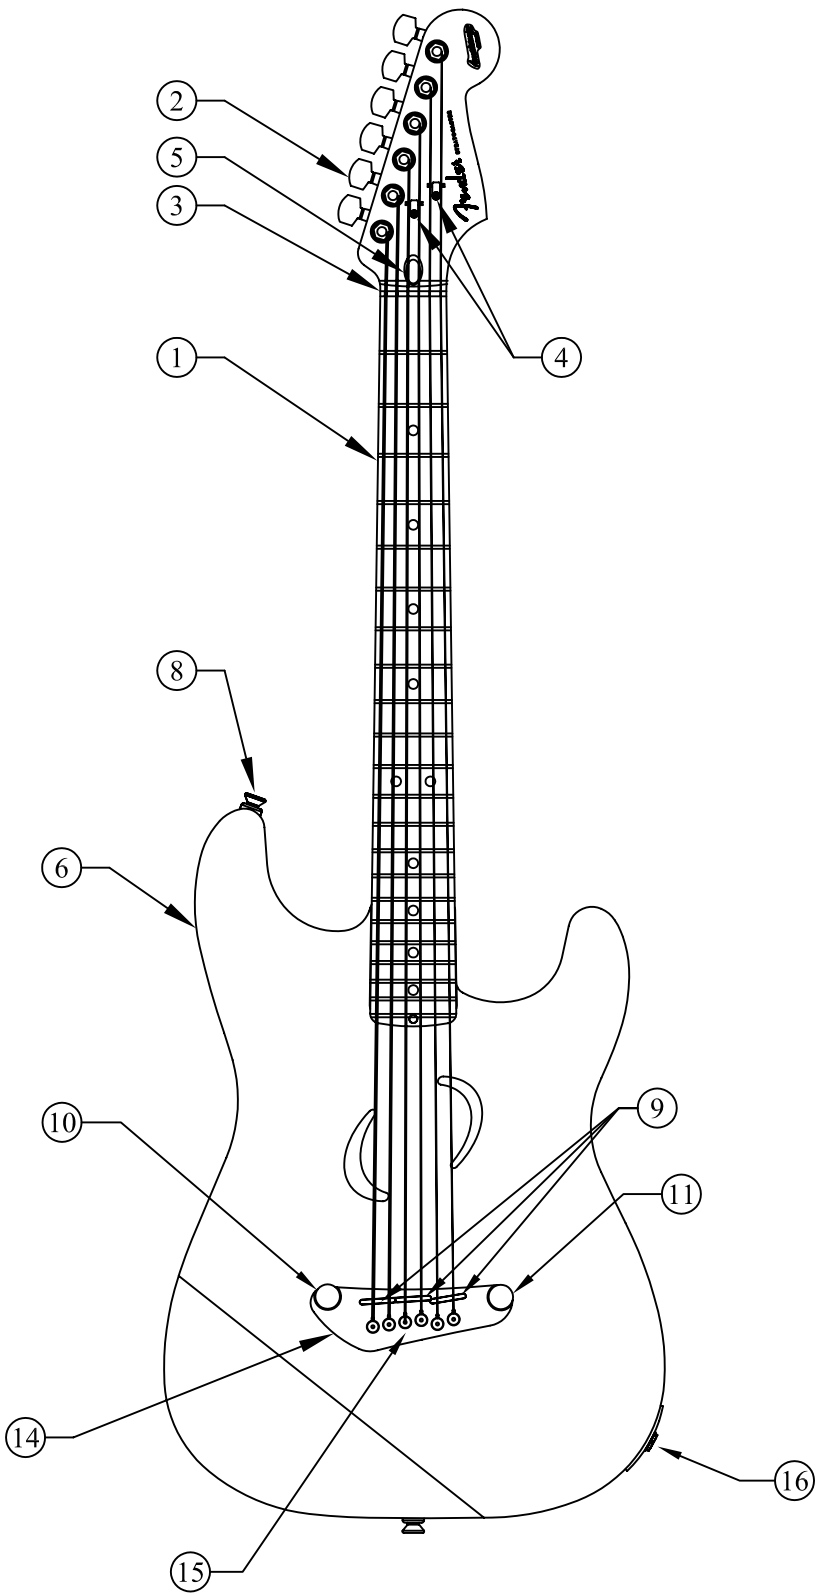

Fender®

ACOUSTASONIC™ STRAT®, 013-9700

WIRING DIAGRAM

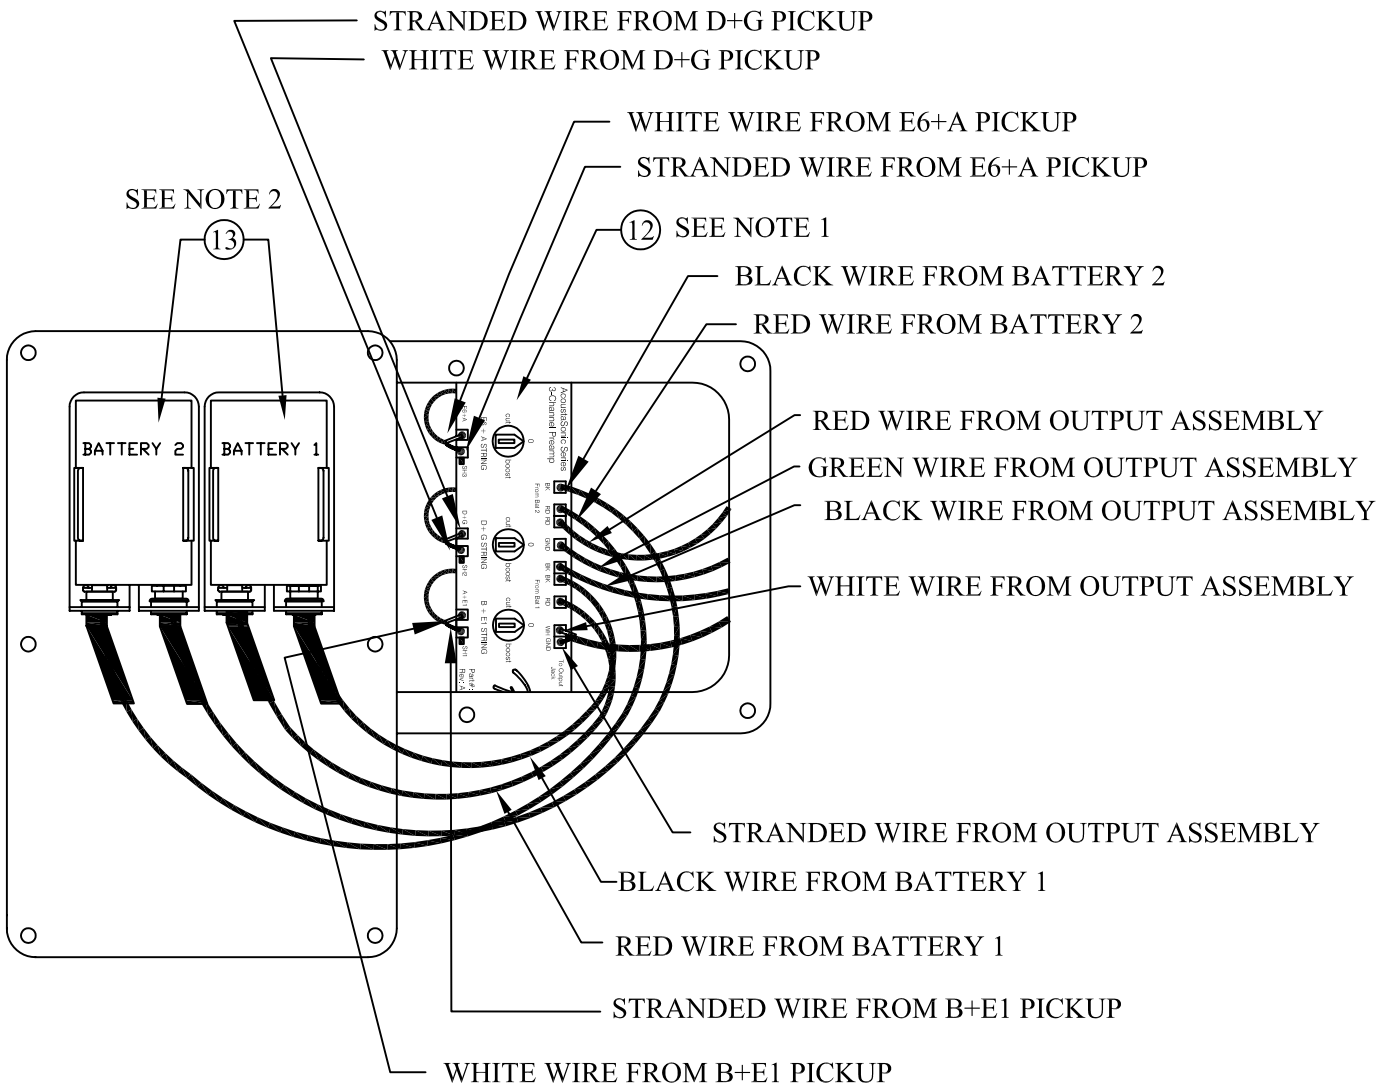

NOTE:

- 1) CUT OR BOOST TRIM POTS FOR VOLUME ADJUSTMENT OR EACH STRING PAIR ARE MOUNTED TO THE P.C.BOARD.
- 2) BATTERIES ARE ATTACHED TO BACK PLATE. BOTH BATTERIES HAVE TO BE CHANGED AT THE SAME TIME. USING THE SAME BRAND FOR EACH IS RECOMMENDED.

ACOUSTASONIC™ STRAT®, 013-9700

REF.#	P/N	DESCRIPTION
1	0060749000	Neck, Mex Deluxe 22 Frets, RW
2	0037429000	Tuning Key
	0053107000	Bushing
	0053106000	Washer
3	0083675000	Bone Nut
4	0021537000	String Retainer
	0021405000	Mounting Screw
5	0038467000	Truss Rod Adjusting Wrench
6	See Chart	Body, Acoustasonic Strat®
7	0018353000	Neck Mounting Plate
	0016536000	Mounting Screw
8	0012344000	Strap Button
	0015610000	Mounting Screw
	0019056000	Felt Washer, Black
9	0060754000	Piezo Pickup, Fishman Acoustic Matrix
	0061467000	Bridge Section, E1+B
	0061468000	Bridge Section, G+D
	0061469000	Bridge Section, A+E6
10	0059572000	Control, B100K PCMD, Volume
	0058441000	Lock Washer
	0063154000	Mounting Nut
	0060753000	Knob, Knurled Alum Brn-Anodized
11	0059571000	Control, 15A25K PCMD, Active Tone
	0058441000	Lock Washer
	0063154000	Mounting Nut
	0060753000	Knob, Knurled Alum Brn-Anodized
12	0060755000	PC Board Assy, Acoustasonic Strat
13	0017405000	Battery, 9 Volts
14	0063049000	Bridge Assy, Acoust Strat
15	0060752000	String Pin Black w/ White Dot
16	0060757000	Jack Output Assy, Acstrat Chrm
	0015578000	Mounting Screw
17	0061470000	Back Plate Assy, Acoust Strat
	0056748000	Insert Brass Slotted
	0030654000	Mounting Screw
	0063127000	Sticker, Backplate Feature Description


BODY CHART

P/N	COLOR
0060743538	Crimson Red Transparent
0060743539	Ebony Transparent
0060743543	Pewter
0060743527	Sapphire Blue Transparent



ACOUSTASONIC™ STRAT®, 013-9700

SWITCH & CONTROL FUNCTION

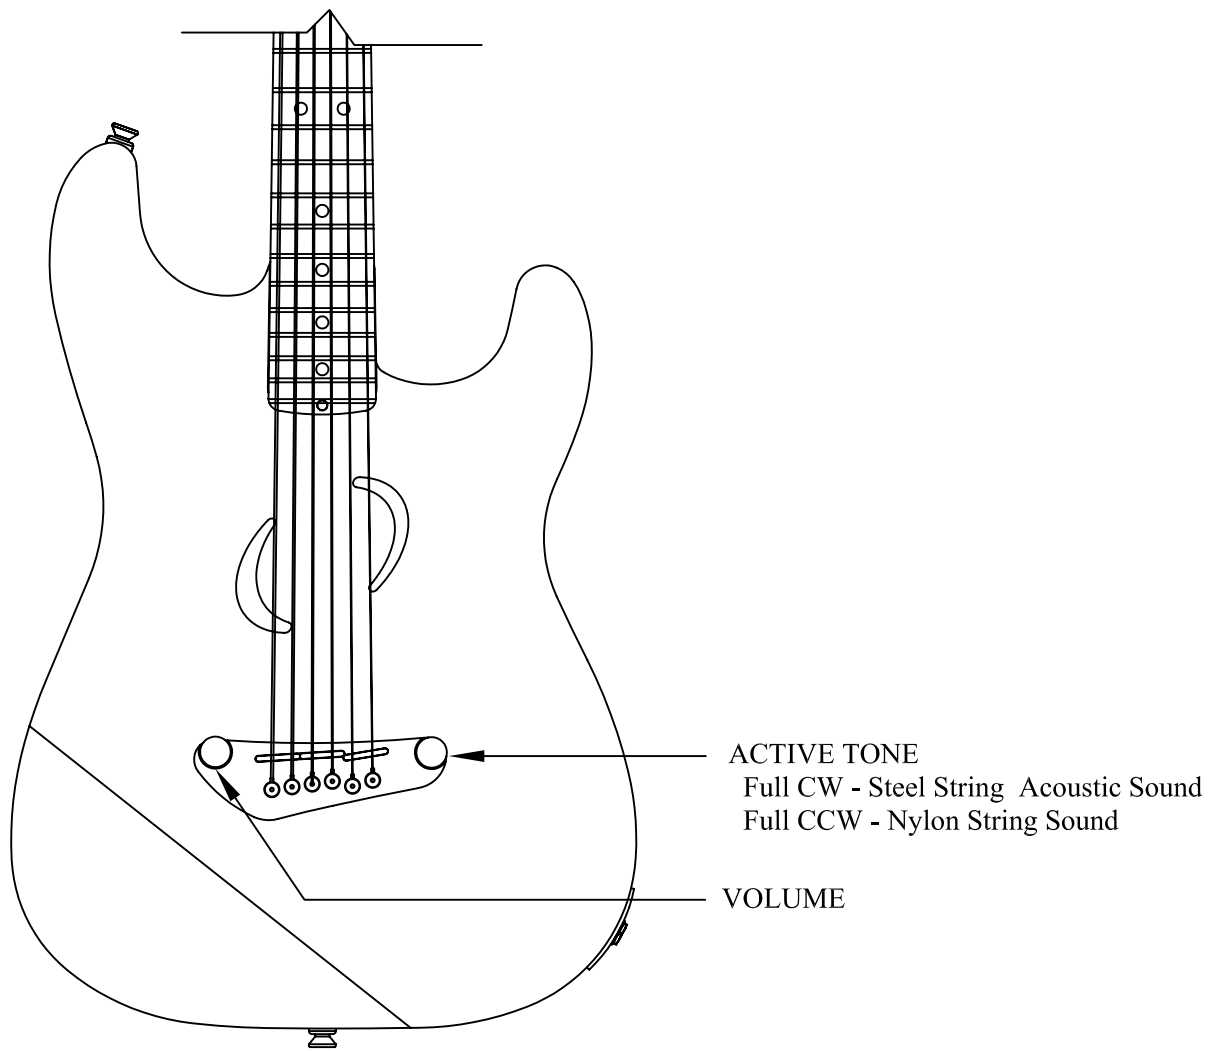

Fender®