

## ROSCOE BECK BASS<sup>®</sup> IV, RW/MN, 019-6400 & 019-6402 CONTROL ASSEMBLY SCREW DOWN GROUND LUG TO CAVITY AS SHOWN SCREW DOWN GROUND LUG ASSY (21) AND SOLDER WIRE TO BACK OF **VOLUME POT** STRIP 3/8" FROM SEE DETAIL "C" **END OF WIRE** SEE DETAIL "A" BLACK WIRE FROM BRIDGE AND SEE DETAIL "B"≺ RED WIRE FROM BRIDGE P.U. GO TO GROUND TERMINAL OF OUTPUT JACK WHITE WIRE FROM LEVER SWITCH SOLDER BLACK WIRE FROM BRIDGE PICKUP TO THIS TERMINAL BLACK WIRE FROM SIDE OF TONE POT-BLACK WIRE FROM MINI SWITCH BLACK WIRE FROM ANOTHER MINI SWITCH SOLDER WHITE WIRE FROM BRIDGE PICKUF TO THIS TERMINAL SOLDER BLACK WIRE FROM BRIDGE AND RED WIRE FROM BRIDGE P.U. TO THIS GROUND TERIMINAL --WHITE WIRE FROM -VOLUME POT SOLDER GREEN WIRE FROM BRIDGE PICKUP TO THIS TERMINAL DETAIL "B" DETAIL "A" - WIRING TO VOL. POT WHITE WIRES TO $\bigcirc \bigcirc \bigcirc$ LEVER SWITCH WHITE WIRE TO MINI SWITCH RHBLACK WIRE TO BACK OF VOL. POT BLACK WIRE TO The soleties SIDE OF POT CAPACITOR LEG DETAIL "C" Pg. 2 of 4 DETAIL "D" - BRIDGE ASSY PUSH-PULL SWITCH POT 6-1-2004 Rev. B


ROSCOE BECK BASS® IV, RW/MN, 019-6400 & 019-6402					
REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0063291000	Neck, R. Beck 4 String Maple Fretboard	23	0063512000	Bridge Assy, Roscoe Beck 4 String
	0063292000	Neck, R. Beck 4 String R/W Fretboard		0021109000	Adjusting Wrench
2	0050911000	Tuning Key (3)		0018622000 0063854000	Adjusting Wrench
2	0021405000	Mounting Screws	24	0063841000	Mounting Screw Bridge Plate
3	0059193000	Tuning Key (1)	25	0063246000	Bridge Back Stop
4	0059590000	Mounting Screw	26	0063842000	Saddle LH
4 5	0048649000 0058332000	Bone Nut String Guide (3 String Chr)	27	0063843000	Saddle RH
)	0038332000	Mounting Screw	28	0063846000	Spring
7	0048693000	Truss Rod Adjusting Wrench	29	0063847000	Spring
8	See Chart	Body, R. Beck 4 String	30	0063848000	Spring
9	0063296000	Neck Mounting Plate	31	0063853000	Set Screw
_	0021424000	Mounting Screw	32	0021093000	Set Screw
10	0012344000	Strap Button	33	0063852000	Set Screw
	0016188000	Mounting Screw	34 35	0068227000 0063849000	Washer Hex Screw
	0019056000	Felt Washer, Black	36	0063850000	Skt Screw
11	0063294000	Pickguard, R. Beck 4 String (P/B/P)	37	0063851000	Skt Screw
	0021407000	Mounting Screw	38	0048604000	Ferrule, String
12	0063513000	Pickup, Lawrence R. Beck 4 String Neck			
	0021408000	Mounting Screw			
10	0018556000	Weatherstrip			
13	0063514000	Pickup, Lawrence R. Beck 4 String Bridge			
	0021408000 0018556000	Mounting Screw			
14	0018336000	Weatherstrip Control 250K, Volume			
17	0016352000	Mounting Hex Nut			
	0022384000	Lock Washer			
15	0063866000	Switch Pot - Push/Pull, 250K			
	0024988000	Resistor CF 1/4 W 5% 27 K			
	0050133000	Lock Washer			
16	0021714000	Switch 3 Pos On/On/On Chrm Chr			
	0021716000	Mounting Hex Nut			
17	0021718000	Flat Washer			
17	0053290000	Switch 3 Way Grigsby w/ Metal Roller		$\underline{BO}$	DY CHART
18	0015776000 0015552000	Mounting Screws Capacitor CD 100V 20% .05uF			
19	0018357000	Knob, Vintage Tele Knurled		Part #	Color
20	0013267000	Knob, Pickup Selector Switch		006333550	0 3-Color Sunburst
21	0012869000	Solder Lug			
	0015116000	Mounting Screw		006333553	8 Crimson Transparent
22	0021956000	Jack Phone Open Circuit II		006333554	2 Honey Burst
	0016436000 0031153000	Washer, Lock Intl Washer, Flat		006329350	2 Lake Placid Blue
	0031133000	Nut, Hex		000327330.	2 Lanc I nord Dido
	3010222000	1.00, 1101			

# 0063293502 Lake Placid Blue

Pg. 3 of 4 6-1-2004 Rev. B

### ROSCOE BECK BASS<sup>®</sup> IV, RW/MN, 019-6400 & 019-6402

### **SWITCH & CONTROL FUNCTIONS**

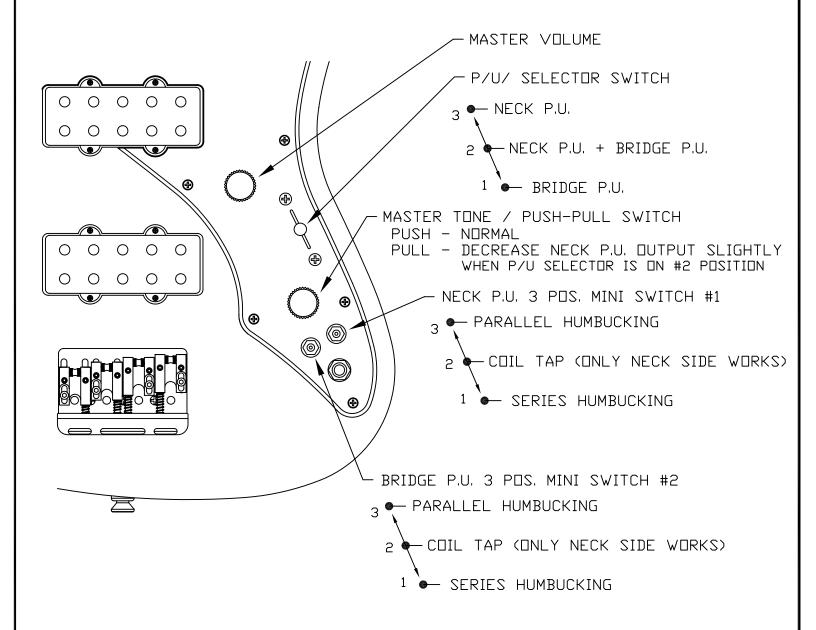

Pg. 4 of 4

6-1-2004 Rev. B